

CONTAPrintMAX SOFTWARE

TTPCardMAX PRINTER

The TTPCardMAX printing system for outstanding print quality that satisfies all marking requirements.



Contents


1 - PREFACE	4
1.1 SAFETY INSTRUCTIONS	4
1.2 SAFETY TIPS	4
2 - HARDWARE INSTALLATION	6
2.1 DEVICE OVERVIEW - PRINTER COMPONENTS	6
2.2 INITIAL STARTUP - UNPACKING THE PRINTER	7
2.3 TECHNICAL DETAILS – TTPCardMAX PRINTER	8
3 - SETTING UP THE TTPCARDMAX FOR PRINTING	9
3.1 DISPLAY PANEL - FUNCTIONS	9
3.2 CONTROL PANEL NAVIGATION - MENU SETTINGS	10
3.3 CONNECTING THE PRINTER - POWER AND COMMUNICATION	14
3.4 INK RIBBON - REMOVAL	14
3.5 INK RIBBON - LOADING	16
3.6 CLEANING RIBBON - REMOVAL	16
3.7 CLEANING RIBBON - LOADING	18
3.8 TURNING THE PRINTER - ON/OFF	19
3.8.1 TURNING THE POWER ON	19
3.8.2 TURNING THE POWER OFF	19
3.8.2A Manual OFF	19
3.8.2B Automatic OFF	19
3.9 CANCEL PRINT JOB - REMOVING ITEMS	20
3.9.1 REMOVING A JAMMED ITEM	20
4 - SOFTWARE INSTALLATION	21
4.1 INSTALLING ContaPrintMAX SOFTWARE	21
4.2 INSTALL PRINTER DRIVER: CREATING P-PRINTER DEVICE	22
4.2.1 - PRINTER DRIVER UNINSTALL	23
4.3 AUTOMATIC CREATION OF VIRTUAL PRINTERS	24
4.3.1 VIRTUAL PRINTER SETTINGS - VIA WINDOWS	25
4.3.2 VIRTUAL PRINTER SETTINGS - VIA ContaPrintMAX	26
4.3.3 VIRTUAL PRINTER SUMMARY OF SETTINGS	28
4.4 PRINTING CALIBRATION	29
4.4.1 CENTERING VIA ContaPrintMAX	29
4.4.2 LENGTH ADJUSTMENT VIA ContaPrintMAX	32


5 - PRINTING BASICS – SELECTING THE RIGHT MODE	34
5.1 MANUAL MODE - PC BSTR TERMINAL BLOCK MARKERS	35
5.1.1 PREPARING PRINTER FOR MANUAL MODE – PC BSTR TERMINAL BLOCK MARKERS	38
5.2 CABLES W/INLAY MODE – SI2K02 CABLE MARKERS	40
5.2.1 PREPARING PRINTER FOR SI2K02 CABLE MARKERS WITH INLAY	42
5.3 SINGLE T-BLOCKS MODE – SI2KTB TERMINAL BLOCK MARKERS	45
5.3.1 PREPARING PRINTER FOR SI2KTB TERMINAL BLOCK MARKERS	47
5.4 AUTO MODE – SI2KAF/SI2KTM TERMINAL BLOCK/WIRE MARKERS	49
5.4.1 PREPARING PRINTER FOR SI2KAF/SI2KTM TERMINAL BLOCK/WIRE MARKERS	51
5.5 HORIZ. HIGH TEMP MODE – SI2K/EVO/PMMA/PUR DEVICE/INSTALLATION MARKERS	55
5.5.1 PREPARING PRINTER FOR SI2K03/EVO/PMMA/PUR DEVICE/INSTALLATION MARKERS	57
5.6 HORIZ. LOW TEMP MODE – SI2K/EVO DEVICE/INSTALLATION MARKERS	59
5.6.1 PREPARING PRINTER FOR SI2K/EVO DEVICE/INSTALLATION MARKERS	61
5.7 VERT. HIGH TEMP MODE – SI2KTB/AF/TM/EVO TERMINAL BLOCK & DEVICE/INSTALLATION MARKERS	61
5.7.1 PREPARING PRINTER FOR SI2KTB/AF/TM/EVO TERMINAL BLOCK & DEVICE/INSTALLATION MARKERS	62
5.8 VERT. LOW TEMP MODE – EVO/EVOCT/EVOPS CABLE & DEVICE/INSTALLATION MARKERS	63
5.8.1 PREPARING PRINTER FOR EVO/EVOCT/EVOPS CABLE & DEVICE/INSTALLATION MARKERS	65
6 - MAINTENANCE	66
6.2 - PRINTER ERROR MESSAGES	66
6.3 - PRINTER TROUBLESHOOTING	67
6.3.1 – CORRECT USE	67
6.3.2 – PRINT QUALITY	68
7 - INFORMATION TO USERS ON RECYCLING OPERATIONS	69
7.1 PACKAGING	69
7.2 DISPOSAL	69

1 - PREFACE

1.1 SAFETY INSTRUCTIONS

Please ensure that you follow the instruction manual carefully and pay attention to the ones with the following symbols:

	WARNING <hr/> Indicates situations where mishandling might result in personal injury or damage to property. To protect yourself and your property, be sure to observe these cautions
---	--

	NOTE <hr/> Indicates important information and restrictions concerning operation. Be sure to read this information to prevent the unit from breaking down or being damaged, and to ensure it is not operated incorrectly
---	--

1.2 SAFETY TIPS

	WARNING
--	----------------

To reduce the risks associated with short circuit, fire and/or electrical shock, which if not avoided, could result in minor or moderate injury:

- Don't set this printer up close to alcohol, paint thinner and other flammable chemicals
- Don't use flammable sprays close to the printer
- When cleaning the printer, dampen some cloth and wring it out thoroughly. Do not use flammable solvents, such as alcohol, benzene or paint thinner.
- If the printer begins working not properly, emitting smoke or strange smells, turn it off immediately, unplug the power cord and contact Conta-Clip Technical Support for assistance
- Don't use multi socket adapters to plug more than one device into one single plug
- Make sure that the power cord is properly plugged in
- Never attempt to disassemble or modify the printer
- Before cleaning the printer, always turn it off and unplug the power cord
- Do not connect the printer to a power source that provides other than the rated voltage (100V to 240 AC, 50/60 Hz). Using any other voltage could cause a fire or electric shock.
- Do not pull the power cord when it is connected to the power cord socket on the rear of the printer or otherwise apply undue force to the power cord connector. Doing so could damage the wiring and cause a short, fire, or electric shock.
- When unplugging the power cord from the power outlet or the socket on the rear of the printer, always grasp the plug or connector.
- Do not touch the print head immediately after printing.
- Do not use this printer and its accessories for any purpose other than the one designed to.
- Do not scratch the print head.
- Do not clean the print head using cloths that allow metallic particles to adhere. If the print head is scratched, the printer will no longer print in the scratch zone.
- When cleaning the print head be careful.
- Don't place heavy objects, metallic objects or containers of liquids on the printer

- Don't set up the printer on an unstable surface or in a location subject to vibrations
- Don't set up the printer in a hot, humid or dusty location, nor in the vicinity of an open flame
- Don't set up the printer on a rug or a carpet
- Keep the area around the power plug free of obstructions so that you can unplug the power cord at any time
- Don't cover the fan holes
- Keep the area around the printer free as shown in the pictures below

Failure to follow the warnings and cautions describe below during use and maintenance of the printer could result in accidents, fire, electrical shock or burns:

- Use only the ribbon cassette on equipment. Never to attempt to disassemble the ribbon cassette to place another ribbon inside the cassette. Do not pull the plate or sheet while print is being in process
- Do not expose TTPCardMAX to direct sunlight, high humidity or dust. Use and store the printer and its accessories respecting the environmental conditions listed below:


	Temperature °C	Humidity %RH
Operative environment	15 - 32.5	15 - 80
Storage environment	5 - 35	35 – 85

- During the printing process never open the cassette cover and never touch the cleaning auxiliary roller, the conveyor roller.
- Never use the printer without the cleaning cassette. Using the printer when the cleaning roller is dirty can damage the print head.
- Before loading the cleaning cassette, take out the ribbon cassette. Trying to load the cleaning cassette while the ribbon cassette is still in his place could cause a bad cleaning cassette loading.
- After loading the cleaning cassette, make sure that the guide tabs are securely fixed in the notches of the cassette.
- Do not turn off the printer while it is printing to avoid damaging the print head or the ribbon.

2 - HARDWARE INSTALLATION

2.1 DEVICE OVERVIEW - PRINTER COMPONENTS

Side View

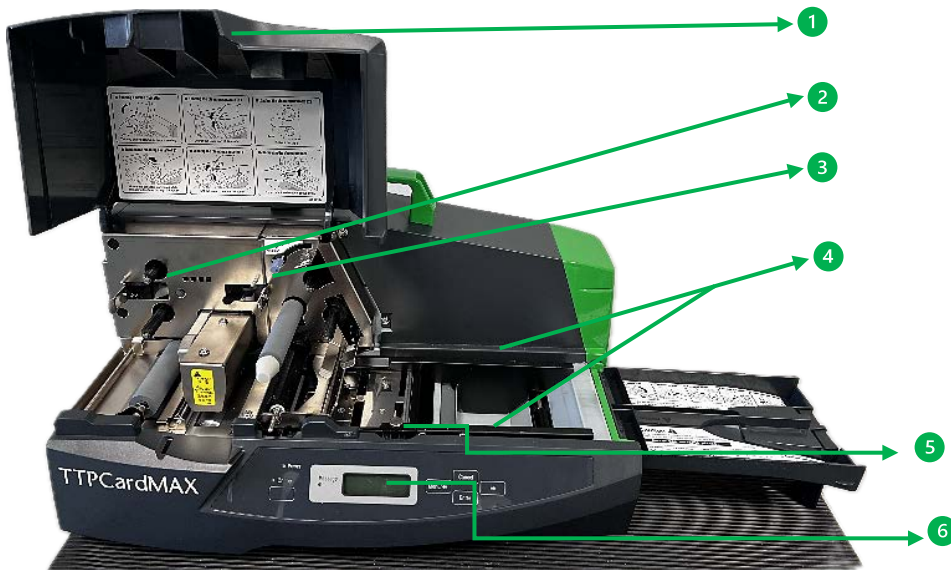


1. Cover
2. Ribbon cassette mount
3. Cleaning cassette mount
4. Guide Rails
5. Locking Screw-A (for guide rails)
6. Display Panel (Menu Screen)

Front View




1. Power Switch
2. Marker card feeding support

Close up Interior View

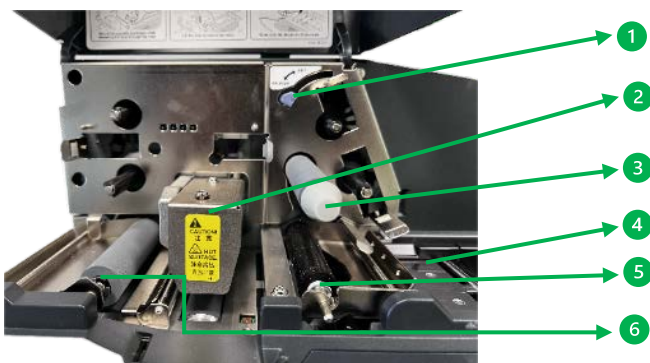

1. Cleaning cassette Set and Release lever
2. Print head Unit
3. Cleaning cassette auxiliary roller/Holder
4. Feeding tab
5. Cleaning roller
6. Card Marker Roller

Rear Exterior View

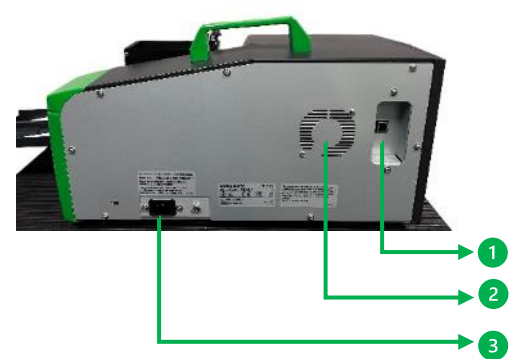


1. USB Port
2. Cooling Fan
3. 120/230V Power Inlet



Install the printer away from obstacles and with the following minimum clearances around the printer as shown in (Figure 1.1)

Fig 1.1

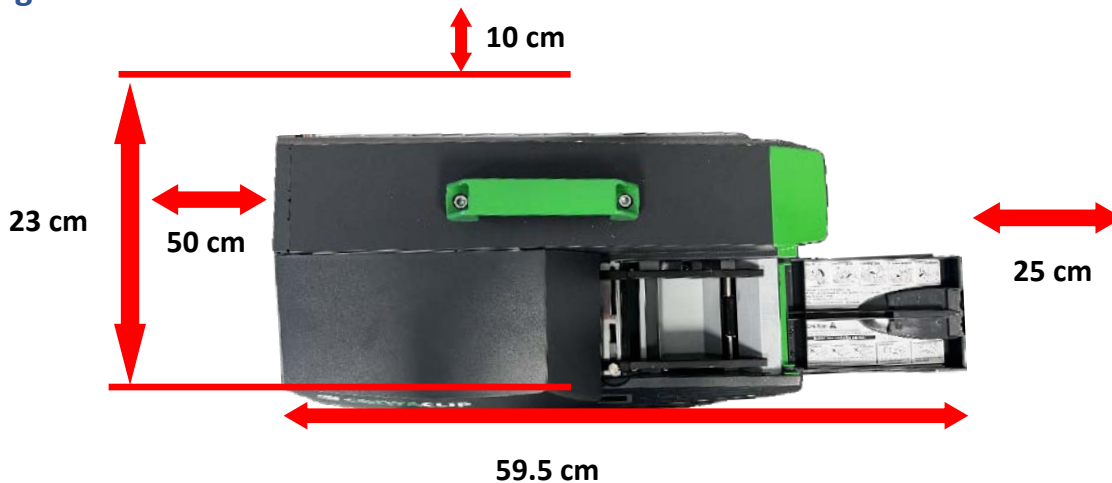

2.2 INITIAL STARTUP - UNPACKING THE PRINTER

1. The printer and accessories are delivered in a wooden crate and skid. Cut the tie-wraps loose and remove the lid.
2. Carefully lift, the wooden sides to expose the card board box for which the printer and accessories are delivered in.



Printer weight is 9,5 Kg ensure when lifting-up the printer with two hands using the handle.

3. Open the box. Observe that no damages have been made to the contents.
4. Lift-up the printer using the handle
5. Check delivery for completeness, the following is scope of supply:
 - TTPCardMAX Printer (1 PC)
 - Power cable (1 PC) (**For US POWER CABLE use part#880084.0 (Will come with printer upon request)
 - USB cable (1 PC)
 - 33010.0 - CC-M EVOPL0021 – Inlay for Manual operation, cable markers (SI2K02W/10N-18N series) (1 PC)
 - 33018.0 - CC-S SI2K0017 – Inlay for single operation, terminal markers (SI2KTB Series, universal) (1 PC)
 - 33001.0 - CCI-S TBBSTR001 – Inlay for single operation, for CONTA-CLIP SB and BSTR Terminal Markers (1 PC)
 - 33618.0 - TTPCardMAX CLEANING RIBBON, cassette with 8 m (1 PC)
 - 33619.0 - TTPCardMAX INK RIBBON BK, cassette with 130 m (1 PC)

2.3 TECHNICAL DETAILS – TTPCardMAX PRINTER


General	
Order No.:	33000.0
Printer Type:	Thermal Transfer
Packing unit:	1
Unit of quantity:	ST
Scope of delivery:	Printer TTPCardMAX, Power Cord, USB Cable, Black Ribbon, Cleaning tape, three printer inlays
Weight per piece (excluding packaging):	9.5 Kg
Weight per piece (including packaging):	12.5 Kg
Unit of weight:	Kg
Customs Tariff Number:	84433210
Country of origin:	IT
Ribbon:	Ribbon cartridges Strong Black Ribbon length: 130 MT Colours available: black, red, green, blue, silver, gold, white
Metrics	
Length:	423 mm (without extending marker support)
Width:	225 mm
Height:	240 mm
Further technical data	
Power consumption:	45 W
Min. working temperature:	15 °C
Working Temperature Max.:	32,5 °C
Relative humidity max.:	80 %
Supply voltage:	100 - 240 V AC / 50-60 Hz
Interfaces:	USB 2.0
Printing data	
Print speed max.:	~60mm/sec Manual mode without Inlay: 30mm/sec, Manual mode with Inlay: 20mm/sec, Automatic mode with Inlay: 20mm/sec
Resolution (dpi):	300
Maximum Print Area (mm):	54 x 496
Printhead:	Flat Type
Environmental Product Compliance	
REACH compliant:	No
REACH reference date:	23.01.2024
REACH Candidate Substance Note:	Yes
REACH CAS 1 Substance Name:	LEAD
REACH CAS 1 percent minimum:	0.1 %
REACH CAS 1 percent maximum:	4 %
REACH CAS 1 number:	7439-92-1
RoHS Compliant:	Yes
RoHS Exemption Rule:	6c

3 - SETTING UP THE TTPCardMAX FOR PRINTING

3.1 DISPLAY PANEL - FUNCTIONS

The user can control the operation of the printer with the control panel, for example:

- Issuing, interrupting, continuing and cancelling print jobs,
- Setting printing parameters, e.g. print speed, cleaning frequency, language, printer energy shutdown period, and clear or eject printer media

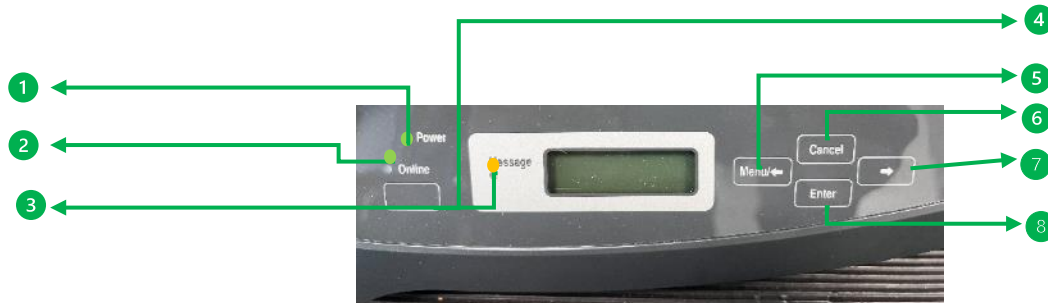

DISPLAY & CONTROL PANEL MENU INDICATORS		
LEDS		
Note	Item	Description
1	POWER	Green light when you turn ON the power switch, Will remain ON unless power failure occurs.
2	ONLINE	Green light when the printer is ready to receive data and flashes when the printer is receiving data. Turns OFF when the printer is offline.
3	MESSAGE	Flashes Amber when an error has occurred and the printer is not able to print. Will flash Amber at all times when the printer is turned ON for the first time.
KEYS		
4	[ONLINE]	Press this key to switch the printer ONLINE or to take it OFFLINE. Only OFFLINE mode will allow for you to enter the Menu selection of the printer. In order to perform a Menu function, always put the printer offline by pressing the ONLINE key so that the ONLINE led turns off.
5	[MENU/⇐]	The Menu can only be entered while the printer is offline. Press this key to enter the printer Menu selection mode. Once entered the Menu mode, use this key to select the Menu function desired. If the Menu function has been selected, holding down this key will cause the conveyor roller to rotate to the left ejecting the item inserted into the printer
6	[CANCEL]	Press this key to cancel the Menu function selected. Press this key to eject an item inserted into the printer Hold down this key for approximately 3 seconds, to cancel the data received from the printer
7	[⇒]	After entering the Menu mode, use this key to display each Menu function If the Menu function has been selected, holding down this key will cause the conveyor roller to rotate to the right ejecting the item which is inserted into the printer
8	[ENTER]	Press this key to confirm and execute the Menu function selected

3.2 CONTROL PANEL NAVIGATION - MENU SETTINGS

Once the printer is turned ON. The following messages will appear on the display screen in sequential order:



If the ONLINE LED is ON, Press the [ONLINE] button to put the printer in OFFLINE mode. At this point the ONLINE LED will turn off and therefore at this point the MENU functions can be entered for selection.

To access the individual areas use the following steps:

Function	Description	Steps	Display Message
CLEANING	to clean the cleaning roller	Press [MENU/←] than [ENTER]	Cleaning Now cleaning...
LANGUAGE	to select the Language of the printers Display Menu	Press [MENU/←] than several times [→] until you arrive at Language message in the display menu. Than Press [ENTER] than several times [→] to select the language of preference displayed on the menu. Press [ENTER] to select that language.	<<Menu>> Language Language English French German Spanish
AUTO OFF	to set the time after the Printer will be turned off after a period of No Use (Energy Saving)	Press [MENU/←] than several times [→] until you arrive at Auto off message in the display menu. Than Press [ENTER] than several times [→] to select the time or no time for the printer to turn off. Press [ENTER] to select that time.	<<Menu>> Auto Off Auto off Off Auto off 5min. later 10min. later 30min. later

<p>PRINT MODE</p>	<p>to set the print mode to “speed” or “quality”</p>	<p>Press [MENU/↔] than several times [⇒] until you arrive at Print Mode message in the display menu. Than Press [ENTER] than [⇒] to select the speed or quality and Press [ENTER] . Once at Speed Press [ENTER] Or at Quality Press [ENTER]</p>	<p><<Menu>> Print Mode Print Mode Speed Quality</p>
<p>AUTO CLEANING</p>	<p>to set the distance for the automatic cleaning of the cleaning roller</p>	<p>Press [MENU/↔] than several times [⇒] until you arrive at Auto Cleaning message in the display menu. Than Press [ENTER] than several times [⇒] to select the length after cleaning or no auto cleaning at all. Press [ENTER] to select that auto cleaning period.</p>	<p><<Menu>> Auto Cleaning Auto cleaning Off Auto cleaning 0.5m after 1m after 2m after 5m after</p>
<p>REMOVE</p>	<p>to clear a jam or to eject a printer media</p>	<p>Press [MENU/↔] than several times [⇒] until you arrive at Remove message in the display menu. Than Press [ENTER] to select the Remove function. Press the [MENU/↔] or [⇒] to remove or move media in or out. Press the [ENTER] for a removal cycle to start. Press the [CANCEL] to exit.</p>	<p><<Menu>> Remove Remove --> --> Remove <-- <--</p>
<p>TEST PRINT</p>	<p>to test print a card material based on density adjustments</p>	<p>Press [MENU/↔] than several times [⇒] until you arrive at Test print message in the display. Press [ENTER] than Press [⇒] To select different materials of cards. Press the [ENTER] on the material and then Press [⇒] to select density. To test that density select [ENTER] to complete. Press the [CANCEL] to exit.</p>	<p><<Menu>> Test Print Test Print PVC Name plate Acrylic Test Print Density1 Density2 Density3 Density4 Density5</p>

<p>POSITION ADJUSTMENT</p>	<p>To adjust printing offset to the right or left of the card.</p>	<p>Press [MENU/↔] than several times [⇒] until you arrive at Position ADJ message in the display menu. Than Press [ENTER] for which now you can adjust the position from -0.425mm to +1.700mm.</p> <p>To move down in adjustment Press [MENU/↔]</p> <p>To move up in adjustment Press [⇒]</p> <p>Press the [ENTER] for that adjustment. Press the [CANCEL] to exit.</p>	<p><<Menu>> Position ADJ</p> <p>Position ADJ 0.000mm</p> <p>Position ADJ -0.425mm -0.340mm -0.255mm -0.170mm -0.085mm 0.000mm +0.085mm +1.700mm</p>
<p>VERTICAL</p>	<p>To adjust printing offset to from the top or bottom of the card</p>	<p>Press [MENU/↔] than several times [⇒] until you arrive at Vertical message in the display menu. Than Press [ENTER] for which now you can adjust the position from -0.510mm to +0.510mm.</p> <p>To move down in adjustment Press [MENU/↔]</p> <p>To move up in adjustment Press [⇒]</p> <p>Press the [ENTER] for that adjustment. Press the [CANCEL] to exit.</p>	<p><<Menu>> Vertical</p> <p>Vertical 0.000mm</p> <p>Vertical -0.510mm -0.425mm -0.340mm -0.255mm -0.170mm -0.085mm 0.000mm +0.085mm +0.510mm</p>
<p>LENGTH ADJUSTMENT</p>	<p>To adjust printing based on the length changes of the physical card. The offset is made to and from the top or bottom of the card</p>	<p>Press [MENU/↔] than several times [⇒] until you arrive at Length ADJ message in the display menu. Than Press [ENTER] for which now you can adjust the length of the total card by a decrease or increase in percentage. The percentage change can be done in the range of -5.0% to +5.0%.</p> <p>To move down in adjustment Press [MENU/↔]</p> <p>To move up in adjustment Press [⇒]</p> <p>Press the [ENTER] for that adjustment.</p>	<p><<Menu>> Length ADJ</p> <p>Length ADJ 0.0%</p> <p>Length ADJ -5.0%....+5.0%</p>

		Press the [CANCEL] to exit.	
BACKLIGHT	To adjust the brightness of the Display	<p>Press [MENU/⇐] than several times [⇒] until you arrive at Backlight message in the display menu.</p> <p>Than Press [ENTER] for which now you can adjust the brightness level of the display LED menu screen. The adjustment change can be done from 1 to 5, whereby 5 is the brightest.</p> <p>To move down in adjustment Press [MENU/⇐]</p> <p>To move up in adjustment Press [⇒]</p> <p>Press the [ENTER] for that adjustment. Press the [CANCEL] to exit.</p>	<p><<Menu>> Backlight</p> <p>Backlight 1 2 3 4 5</p>

3.3 CONNECTING THE PRINTER - POWER AND COMMUNICATION

With the printer Off, attached the power cable and USB Cables provided, and shown in Fig 3.1a



1. 120V Power inlet (NORTH AMERICA)
2. 230V Power Inlet (EUROPE)
3. USB Port Master (USB 2.0/1.1 Standard-B)
To Computer (USB-A Female Port)



This equipment has been tested to comply with EMC Directive technical requirements. Shielded cables have to be used in compliance with EMC Directive technical requirements.

3.4 INK RIBBON - REMOVAL

The Ink Ribbon measures 130 meters, therefore as each tag passes through for printing, the ribbon will in turn and rotate to cover that print.

Never unwind ribbon to reuse, this can lead to damage of the print head and rolling pins.


Always ensure the printer is OFF before lifting cover.

Ink Ribbon Part#33619.0




To load the Ink Ribbon, perform the following steps:

1. Lift the cartridge cover.

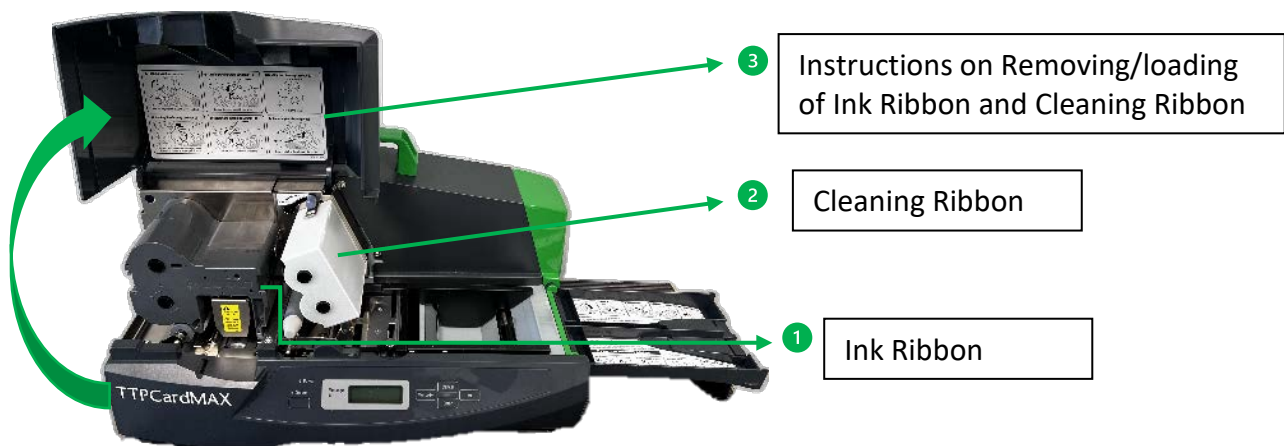

2. Pull out the Ink Ribbon either at position 1 or position 2. Ensure the grip is good and gently pull straight out the ink ribbon from its mount. Do not wiggle the ink ribbon out and do not use rapid force, since it is not needed. The ink cartridge should easy come out.

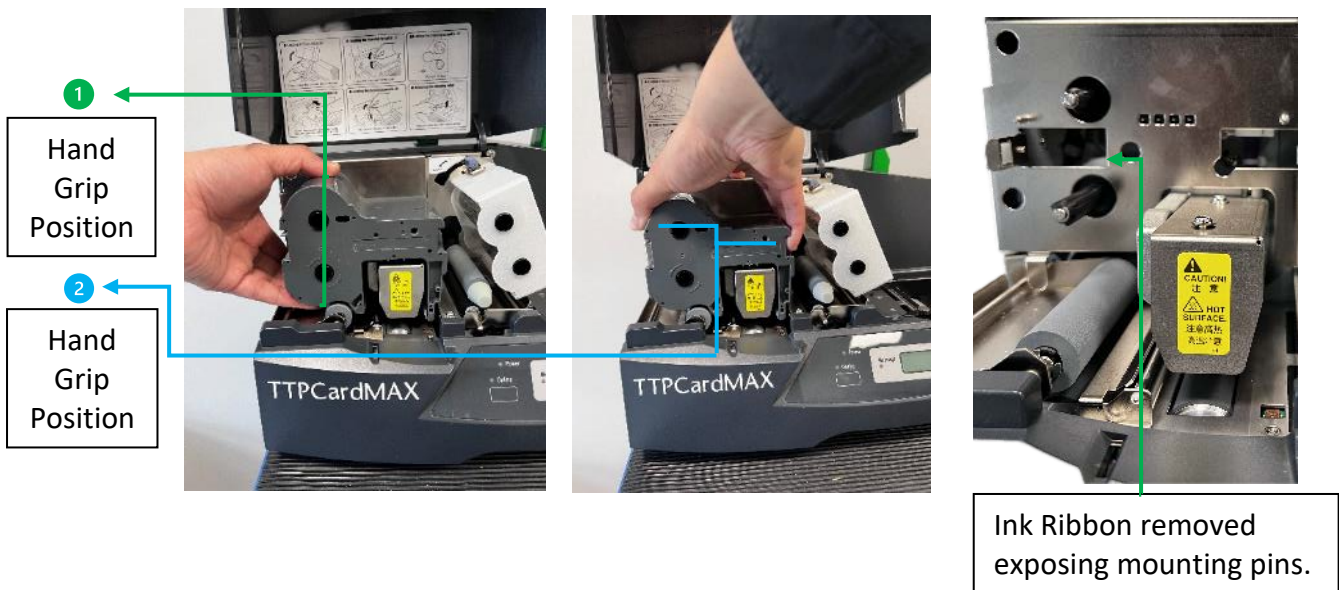


3. When the Ink Ribbon is out, dispose of it in the correct manner.

3.5 INK RIBBON - LOADING



Remove the ribbon cassette stopper and take care the ribbon is well wound.

*Ensure the tape is tighten by rolling it up via the side taps.

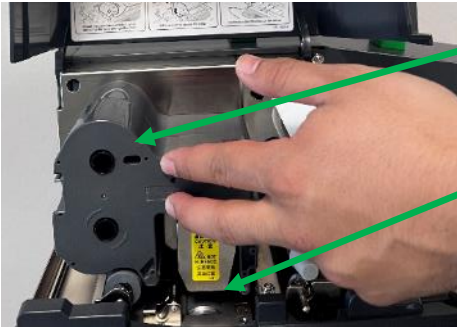

Insert the Ink ribbon so that it aligns with all the holding pins. Make sure the Ink ribbon touches the side wall of its mount, (give it a slight push to ensure).

*Ensure the ribbon tape goes underneath the print head.

*Remember to Close the cassette cover.



TAKE NOTE

The printer cannot detect the ribbon if the Ink ribbon or the ribbon itself is loose. When inserting the Ink ribbon ensure the ribbon is not loose and push the Ink ribbon until it touches its mount wall.

3.6 CLEANING RIBBON - REMOVAL

The printer TTPCardMAX has a special cleaning ribbon purposely designed to clean up the cleaning roller.

Cleaning Ribbon, Part#33618.0



Cleaning Roller Ø18mm, Part#33615.0




To load the cleaning ribbon, perform the following steps:

1. Lift the cartridge cover.



2. Take out the Cleaning Ribbon.

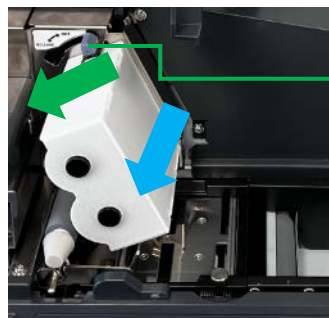


1

Lower the Release lever to **Release**.



- Never use the printer without the cleaning cassette. Using the printer when the cleaning roller is dirty can damage the print head.
- Before loading the cleaning cassette, take out the ribbon cassette. Trying to load the cleaning cassette while the ribbon cassette is still in place, could cause the cleaning cassette to be loaded incorrectly.


3. After lowering the setting lever to Release, the tension roller will raise and the cleaning ribbon and cleaning roller should be free to be removed.

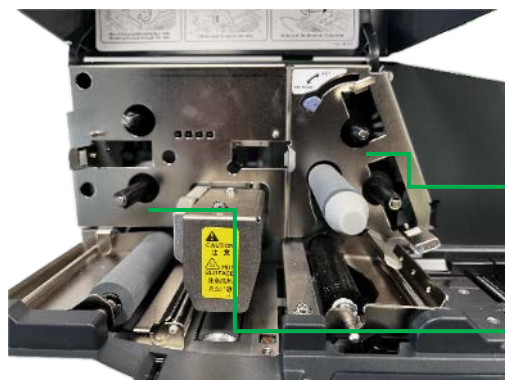

Ink- and Cleaning Ribbon ports.

3.7 CLEANING RIBBON - LOADING

With the setting lever lowered, the Auxiliary Cleaning Roller will rise. As shown below.

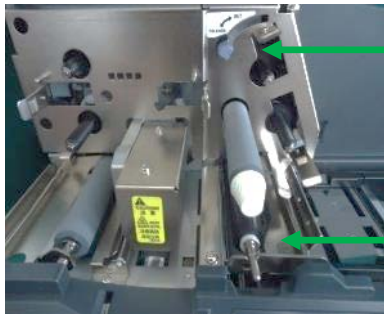

Lower the setting lever


Auxiliary Cleaning Roller will rise



Peel off the tape.
Open the new cleaning cassette by pulling out the tape until the cleaning tape comes out.



Open the new cleaning cassette by pulling out the tape until the cleaning tape comes out.

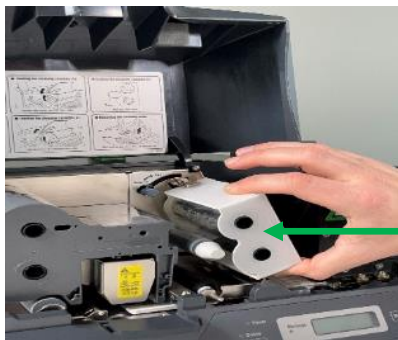

Set the cleaning cassette along the guides passing the cleaning cassette tape around the cleaning auxiliary tension roller.



Raise lever to **SET** position. This will raise and lock the cleaning ribbon into place.

Correct position of cleaning tape and auxiliary tension roller




TAKE NOTE

When the end of the cleaning cassette tape is reached, use the automatic cleaning mode function to keep on printing without damaging the print head.

3.8 TURNING THE PRINTER - ON/OFF

3.8.1 TURNING THE POWER ON

- 1) Ensure that the power cord is properly connected.
- 2) Press the (I) side of the power switch to turn on the printer. The power led on the control panel lights.

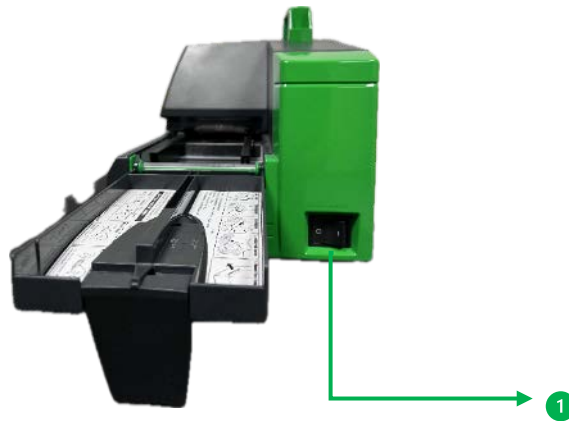

- 3) After the printer performance of its internal tests, if no irregularities are detected, the online led lights and the printer is ready to print. If any item is loaded into the printer, the printer will detect the leading edge of the article.

The following messages appear:



PLATE PRINTER
Version 4.00

Printing Ready
S-black Plate

3.8.2 TURNING THE POWER OFF

3.8.2A Manual OFF

- 1) Ensure that the printer is not performing any operation.
- 2) Press the (O) side of the power switch to turn off the printer



Do not turn off the printer while printing, in doing so it can cause damages on the print head or ribbon cartridges internally.

3.8.2B Automatic OFF

Through the display control panel on the front of the printer, the printer can be set to turn off after no use after a pre-determined period of time. In this power saving mode, the printer can be turned off should someone forget to turn off the printer or simply if there is no use.

- 1) To set the time after the Printer will be turned off after a period of NO USE go to the Menu screen by pressing the [MENU/←]
- 2) Than several times [→] until you arrive at AUTO OFF message in the display menu.
- 3) Than Press [ENTER] than several times [→] to select the time or no time for the printer to turn off.

The following options will appear:

- Auto off
 - 5min. later
 - 10min. later
 - 30min. Later
- 4) Press [ENTER] to select that time.

3.9 CANCEL PRINT JOB - REMOVING ITEMS

It may be required at some point to cancel an unnecessary job that has been sent to the printer. Or Simply you changed your mind about a certain print and need to cancel it.

To do so;

- 1) Press and hold [CANCEL] button on the control panel for 5 seconds.
- 2) The plate or sheet loaded into the printer will disengage from the roller, allowing you to remove the item.
- 3) The printing and the related data are also no longer available at this point, therefore you will need to resend a new print job order to the printer when you are ready again.

3.9.1 REMOVING A JAMMED ITEM

It can very well be possible that an item might be jammed or that after the printing process, the plate which is supposed to automatically eject does not eject.

To clear such cases, the REMOVE function in this case is the best option to remove the fault.

To do so:

- 1) Press [MENU/←] button on the control panel.
- 2) Than several times [→] until you arrive at REMOVE message in the display menu.
- 3) Than Press [ENTER] to select the remove function.
- 4) Press the [MENU/←] or [→] to jog media IN or OUT. The following will appear:

```

Remove
--> -->
Remove
<-- <--

```

- 5) Press [ENTER] for a removal cycle to start or [CANCEL] to exit.
- 6) The printing job and the related data are also no longer available at this point, therefore you will need to resend a new print ob order to the printer when you are ready again.

4 - SOFTWARE INSTALLATION

Driver and ContaPrintMAX software are both required in order for the Printer to function. Both driver and software can be found at our website:

<https://conta-clip.com/en/contact-service/download-center>

The software is intended to operate with Windows Xp, 7, 8, 10, 11 (32bit and 64bit)

 
4.1 INSTALLING ContaPrintMAX SOFTWARE

Download **ContaPrintMAX**

Select the sub-folder **\ContaPrintMAX**


Select the sub-folder **\ContaPrintMAX-SETUP-ENG**

Execute the Program by double-Click on **ContaPrintMAX.exe**




Microsoft Message will appear, select: **YES**


Double-Click to execute **ContaPrintMAX-ENG.exe** Program

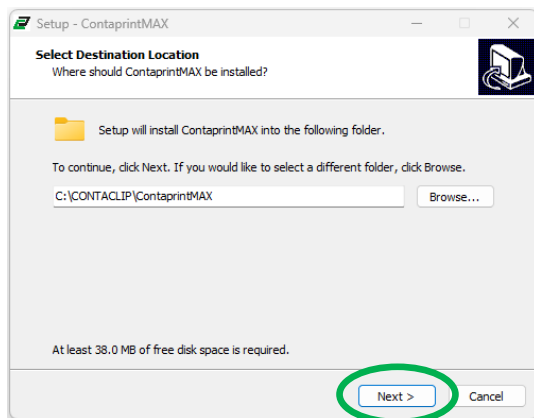


Press **Next** to proceed

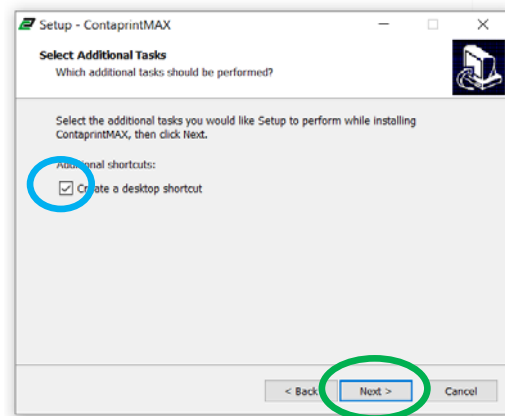

Click **Box** Check mark to Create Short on Desktop and or Press **Next** to proceed

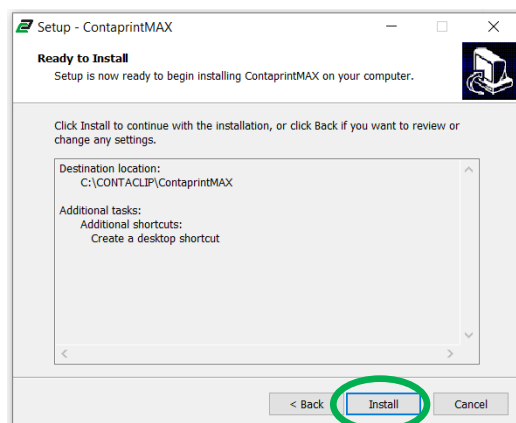

Press **Install** to proceed.

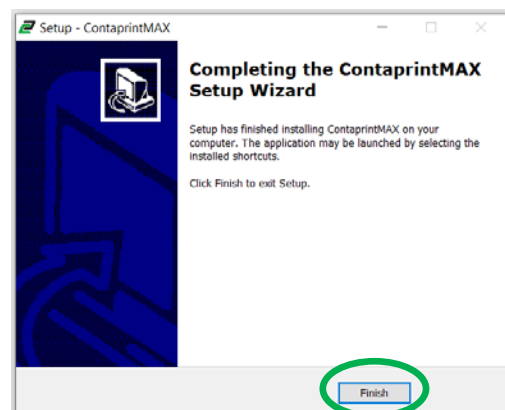

Press **Finish** to complete the Setup

The installation continues, it can take a few minutes.
Congratulations The ContaPrintMAX Software is now installed!
The default directory folder for the file install is **C:\Contaclip\ContaPrintMAX**




The **ContaPrintMAX** icon appears

4.2 INSTALL PRINTER DRIVER: CREATING P-PRINTER DEVICE


Do the following:

- Turn the TTPCardMAX **Off**
- The printer must not be connected to the PC.
- Unplug the USB cable from the printer


Download **ContaPrintMAX DRIVER**
Select the sub-folder **\TTPCardMAX**

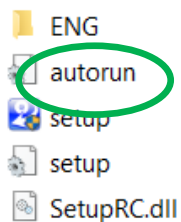

Execute Setup Program select: **autorun**
The installation continues, it can take a few minutes.

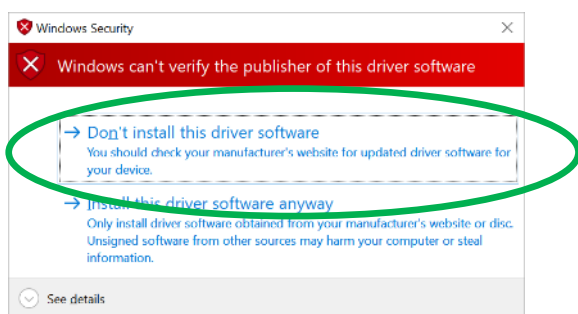


Windows Message: Press **“Install this driver software anyway”**, a **RESTART of PC** is required.

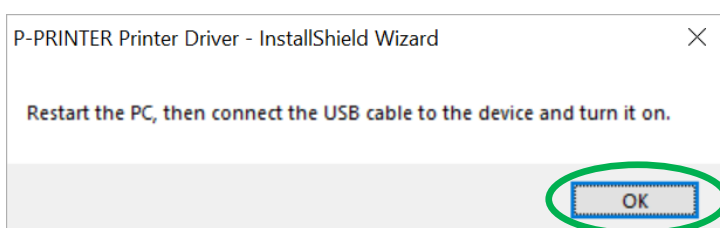


Do the following:

- Connect the printer and the PC with the USB cable.
- **Switch the printer ON**
- Wait for the automatic detection of the new Hardware
After a few seconds a **“new hardware found”** message appears.
- Ensure the Black Ribbon and Cleaning Ribbon are installed. (If not installed correctly a message will appear)
- The **P-PRINTER** is detected and added


To check if the Printer driver is installed go to:

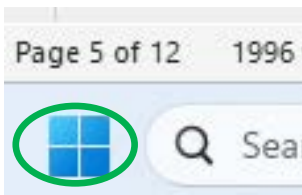


Right Click over windows icon and select: **“Settings”**

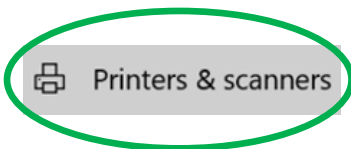

Select: **“Printers & Scanners”**

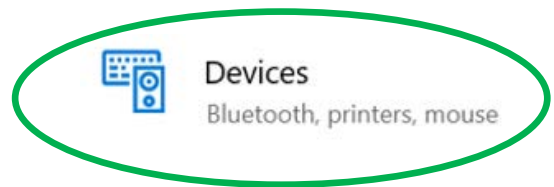

Select: **“Devices”**

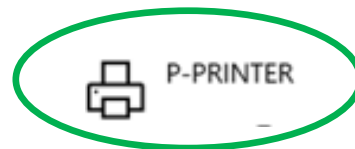


The **“P-PRINTER”** appears

4.2.1 - PRINTER DRIVER UNINSTALL

There are several methods for removing/uninstalling programs in Windows 10 or 11.
To do so via Windows perform the following steps.

 - 1) Unplug the USB cable from the TTPCardMAX printer.
- 2) Open the **Start Menu**.
- 3) Click **Settings**.
- 4) Click **Apps**
- 5) Select **Install apps** from the menu.
- 6) Select **ContaPrintMAX** from the list that appears.




7) Click the 38.0 MB  ... and then **uninstall** that shows under the selected list.


Follow the on-screen instructions to complete the uninstall.

4.3 AUTOMATIC CREATION OF VIRTUAL PRINTERS


Under the **ContaPrintMAX DRIVER** Folder Select subfolder **\Devices**

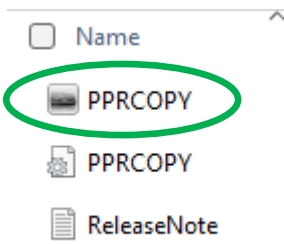

Execute the program **PPRCOPY.exe** (Double-Click)

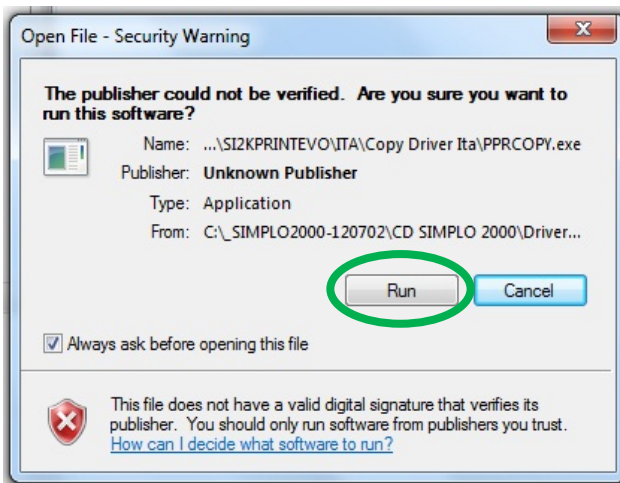

Press **Run**.

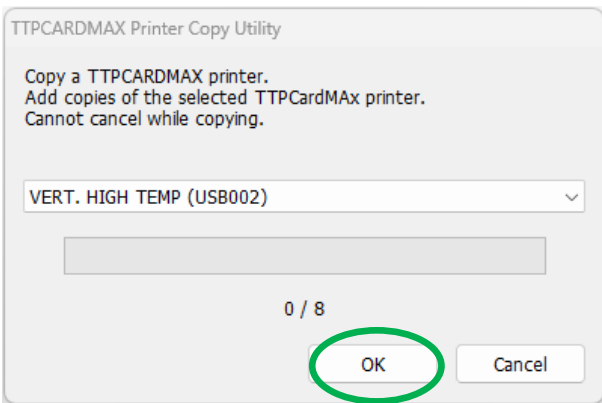

Press **OK** to complete the installation

4.3.1 VIRTUAL PRINTER SETTINGS - VIA WINDOWS

For the Settings of the 8 Devices in Windows follow the following operation

From **Start**

Select **Settings**

Select **Devices and Printers**

Select the first printer **VERT. LOW TEMP**



Right button of the Mouse **OR**

Select **Printer Properties**

Select **Preferences...**

Select **Profiles**

Select the **Virtual Printer** for which you would like to modify:

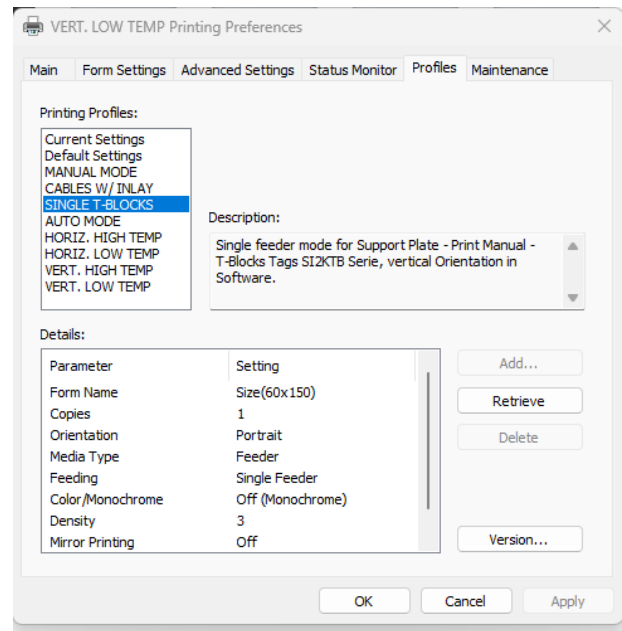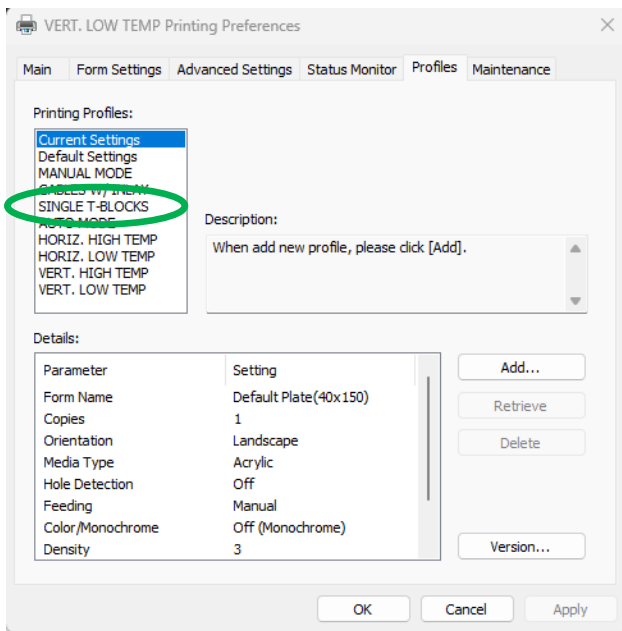

Select for example: **SINGLE T-BLOCKS**

Select **Retrieve**, click **Ok**

Note: Repeat for each virtual device the above step.


4.3.2 VIRTUAL PRINTER SETTINGS - VIA ContaPrintMAX

The program Setup of ContaPrintMAX imports automatically the 8 TTPCardMAX Printer Devices with all the correct parameter for different consumables (printing area, density, orientation, material, and feeding)


The Following Instructions are for importing and setting Printer Drivers in ContaPrintMAX in case of: No communication between PC and Printer after First Installation or Re-installation of TTPCardMAX Printer Drivers



To verify the correct settings.

- Run **ContaPrintMAX**.
- Select Menu **File**
- Select menu **Printer Setup**.

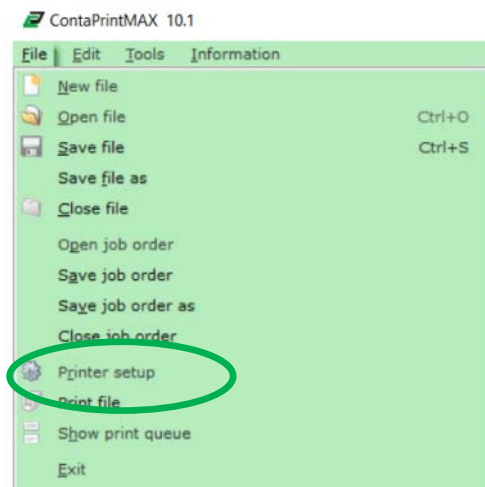


The List of the 8 TTPCardMAX Printer Devices will appear.

  TAKE NOTE Sample below is for «MANUAL MODE» Printer device

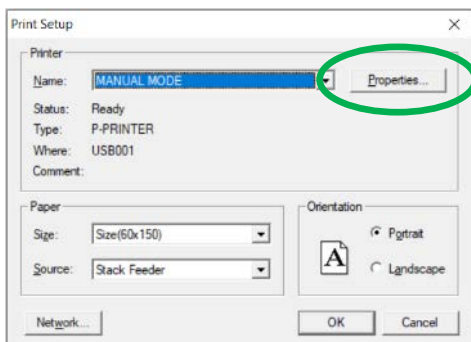


Press **Properties**


Select **“MANUAL MODE”** on the left side

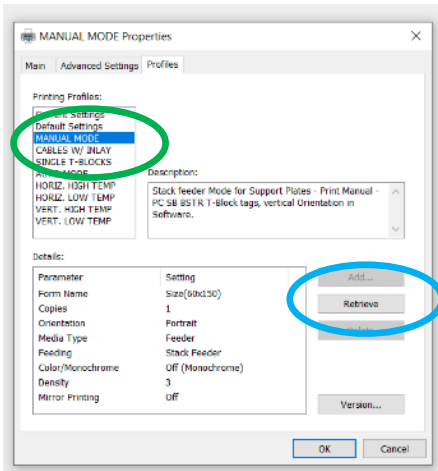

Select **Profiles** --> Select the Profile **“MANUAL MODE”** --> Select **Retrieve**

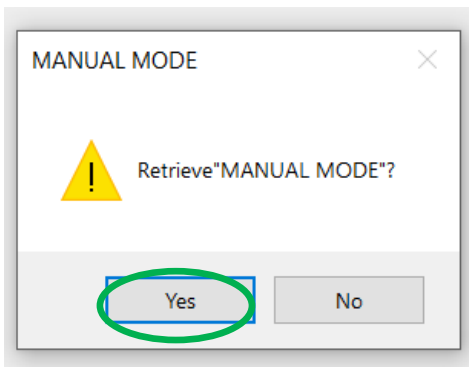

Select **Yes** to Confirm

 **TAKE NOTE** Repeat the Complete Cycle for all the 8 Printer Devices

RETRIEVE each «Pre-Defined Profile» for each TTPCardMAX Device

TTPCardMAX Devices	Pre-Defined Profiles to RETRIEVE
MANUAL MODE	MANUAL MODE
CABLES W/ INLAY	CABLES W/ INLAY
SINGLE T-BLOCKS	SINGLE T-BLOCKS
AUTO MODE	AUTO MODE
HORIZ. HIGH TEMP	HORIZ. HIGH TEMP
HORIZ. LOW TEMP	HORIZ. LOW TEMP
VERT. HIGH TEMP	VERT. HIGH TEMP
VERT. LOW TEMP	VERT. LOW TEMP

4.3.3 VIRTUAL PRINTER SUMMARY OF SETTINGS

Printers Devices	Pre-Defined Profile	Size	Orientation	Media Type	Feeding	Density
MANUAL MODE	MANUAL MODE	60 x 150 (mm)	Portrait	Feeder	Stack Feeder	1
CABLES W/ INLAY	CABLES W/ INLAY	60 x 150 (mm)	Portrait	Feeder	Stack Feeder	3
SINGLE T-BLOCKS	SINGLE T-BLOCKS	60 x 150 (mm)	Portrait	Feeder	Single Feeder	3
AUTO MODE	AUTO MODE	60 x 150 (mm)	Portrait	Feeder	Stack Feeder	3
HORIZ. HIGH TEMP	HORIZ. HIGH TEMP	60 x 500 (mm)	Landscape	Name Plate	Manual	3
HORIZ. LOW TEMP	HORIZ. LOW TEMP	60 x 500 (mm)	Landscape	PVC	Manual	3
VERT. HIGH TEMP	VERT. HIGH TEMP	60 x 500 (mm)	Portrait	Name Plate	Manual	3
VERT. LOW TEMP	VERT. LOW TEMP	60 x 500 (mm)	Portrait	PVC	Manual	3

4.4 PRINTING CALIBRATION

The centering steps allows you to make some corrections at the print starting point. The coordinates (X, Y) can be modified to move the starting point on the right, left, to the top, or at the bottom.

The calibration steps on the other hand allow you to make some corrections on the print step length. It is possible to give a unique correction value, positive (extend the step) or negative (shorten the step) utilizing any kind of item at your disposal.

4.4.1 CENTERING VIA ContaPrintMAX


It is possible to correct the printing start position of the items. If the text is misaligned to the right or left or on the top or bottom. For example:



Correctly:Centered




Incorrect: Letters bottom of Tag

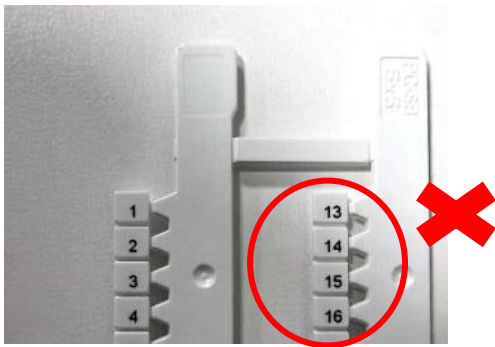


Incorrect: Characters bottom/Right of Tag

To correct this misalignment:
Select **File**
Select **Printer Setup**

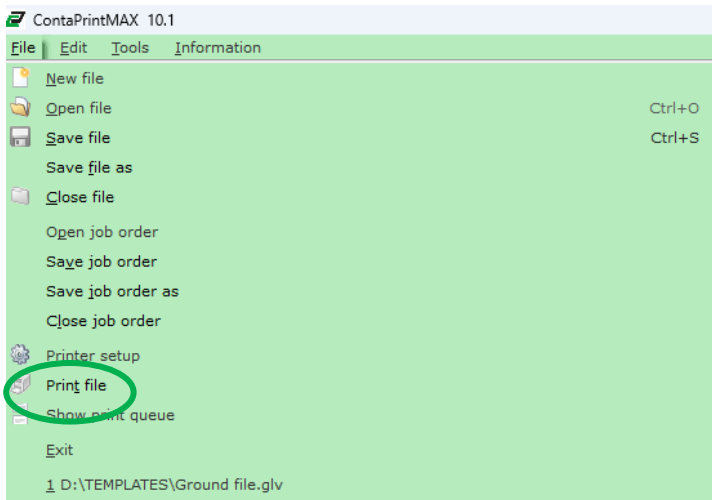

TAKE NOTE

Depending on the marker tags being printed, the virtual printer for that marker must be selected for the alignment process.

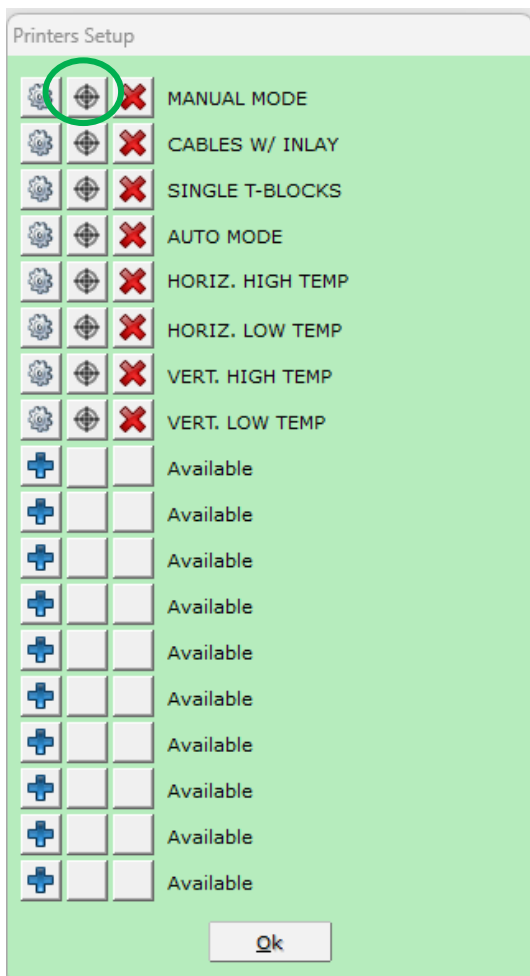


Select the button




nearby the **Manual Mode** virtual printer, Click **OK**

When making alignment changes to the printer, keep in mind that the values being adjusted represent the directions Right, Left, Top, Bottom as shown here:

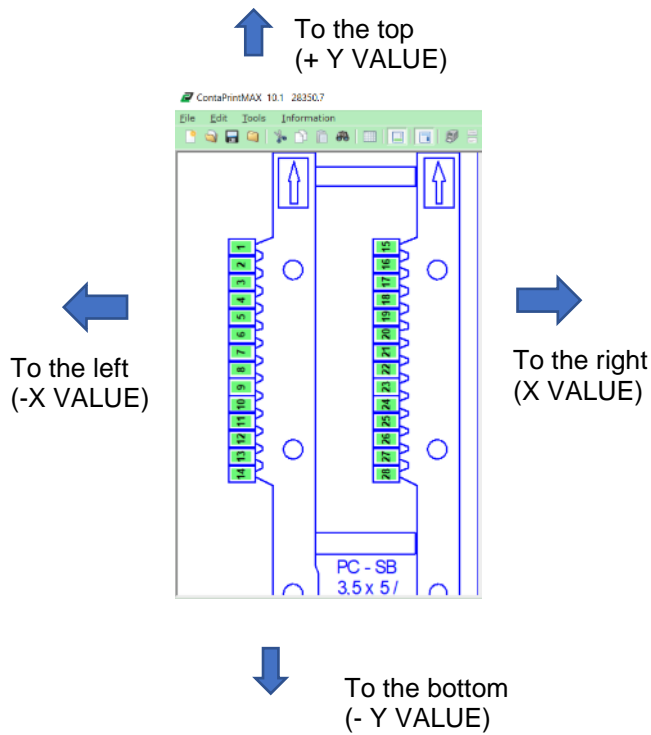

Printing Directions	Mm with two decimal digits Corrections
To the Top	Type in a positive value for the Y axis
To the Bottom	Type in a negative value for the Y axis
To the Right	Type in a positive value for the X axis
To the Left	Type in a negative value for the X axis

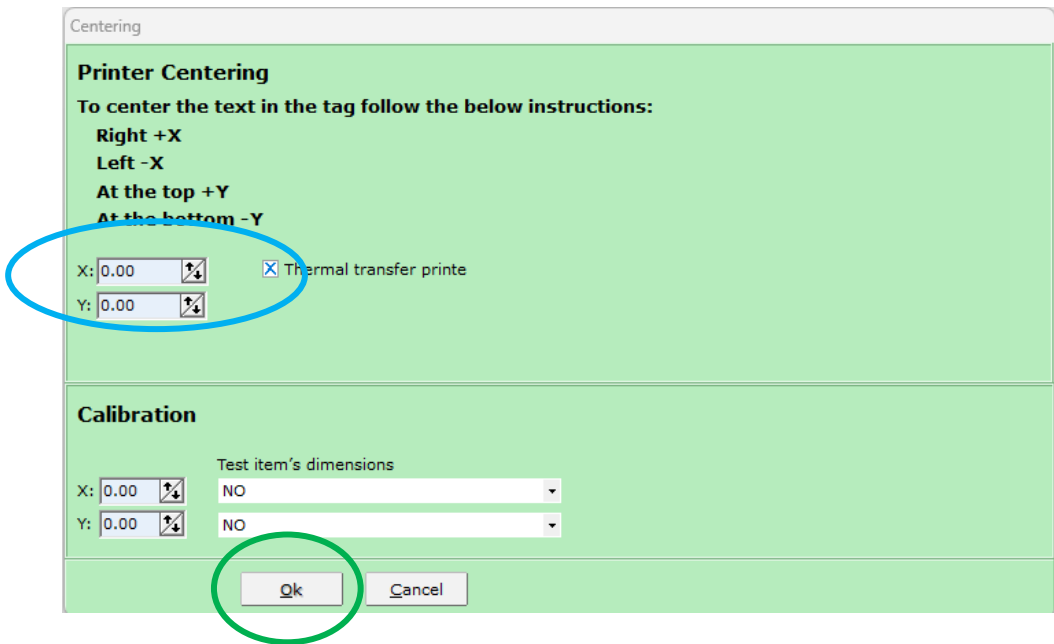

In the Printer Centering Window: Adjust X and or Y values

Insert the value in mm for the correction to execute


- If the correction is in the Horizontal (+ or -X)
- If the correction is in the Vertical (+ or -Y)

Press **OK** to confirm

4.4.2 LENGTH ADJUSTMENT VIA ContaPrintMAX

For this example of calibration in the Horizontal axis we will use the PC-BSTR 5x10/48 MI WH item.

- 1) Run the ContaPrintMAX software
- 2) Create a single-item job
- 3) Insert some texts (HHHHHH) for all the item tags.
- 4) Verify the centering of the first and the last tag
- 5) If the print is too short:

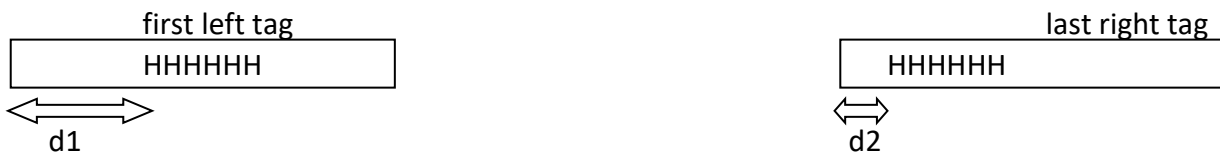



the print step should be extended.

a.5.1) Measure of how many mm the print step is shorter (for example 3 mm). To obtain the difference, the d1 distance between the left item edge and the first 'H' of the first tag will be measured, and also will be measured the d2 distance between the left edge item and the first 'H' of the last tag; the difference will be: $d1-d2=3\text{mm}$

- 6) Select "File", Select "Printer Setup"
- 7) Select the centering button (every device has three buttons, select the second one, black cross)
- 8) In the window on the left bottom side there is the **Calibration** part:
 - 8.1) Select for the X axis the PC-BSTR 5x10/48 MI WH item
 - 8.2) After the item description in the parentheses there is the reference measure of the printed area (220 mm):
 - 8.3) In the X field type in the value in millimeter of the print step really printed.
 - 8.4) In our example: if the PC-BSTR 5x10/48 MI WH is the selected one, the print area is 220mm
 - 8.5) If the printer prints 3 mm shorter, insert in the X field the value $220-3= 217\text{mm}$.
 - 8.6) ContaPrintMAX makes a correction for each print of 217mm and expand it at 220mm.
 - 8.7) This correction value works for all the items of that device.

Lets us now look at calibration example for the Vertical axis with the SI2K02W/15N item for the Feeder.

- 9) Run the ContaPrintMAX software
- 10) Create a Single-item job
- 11) Insert some texts (HHHHHH) for all the item tags.
- 12) Verify the centering of the first and last tag
- 13) If the print is too short:

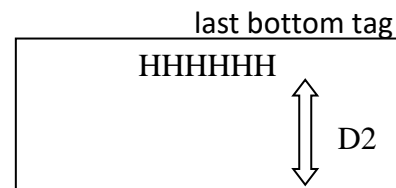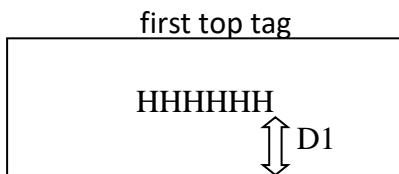

the print step should be extended.

13.1) Measure of how many mm the print step is shorter (for example 3 mm). To obtain the difference, the d1 distance between the left item edge and the first 'H' of the first tag will be measured, and also will be measured the d2 distance between the left edge item and the first 'H' of the last tag; the difference will be: $d1-d2=3\text{mm}$

- 14) Select "File", Select "Printer Setup"
- 15) Select the centering button (the second of the three buttons for each device):
- 16) In the window on the left bottom side there is the calibration part:
 - 16.1) Select for the Y axis the SI2K02W/15N reference item
 - 16.2) After the item description in the parentheses there is the reference measure of the printed area (85 mm).
 - 16.3) In the Y field type in the value in millimeter of the print step really printed.
 - 16.4) In our example: if the SI2K02W/15N is the selected one, the print area is 85mm
 - 16.5) If the printer prints 3mm shorter, insert in the Y field the value $85-3=82\text{mm}$
 - 16.6) ContaPrintMAX makes a correction for each print of 82 mm and expand it at 85mm.

This correction value works for all the items of that device.

5 - PRINTING BASICS – SELECTING THE RIGHT MODE

The ContaPrintMAX software allows you to print Terminal Block Markers, Wire and Cable Markers, and Device and Installation Markers. For this reason, you must select the correct virtual printer for the best quality and printing parameters for that specific marker card.

The virtual Printer which is described here as the “PRINT MODE”, must be selected before you send a job to the printer.

The TTPCardMAX printer is equipped to print in 8 different modes/profiles:

- 1) Manual Mode
- 2) Automatic Mode
- 3) Cables w/Inlay Mode
- 4) Single T-Block Mode
- 5) Horiz. High Temp Mode
- 6) Horiz. Low Temp Mode
- 7) Vert. High Temp Mode
- 8) Vert. Low Temp Mode


Each of the modes above correspond to the marker card that is going to be printed. Therefore follow the steps provided based on the print media you wish to print.




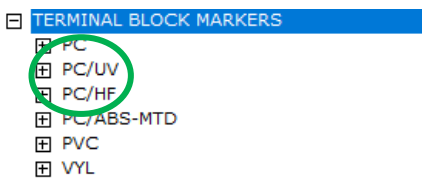
BEFORE PRINTING VIA THE ContaPrintMAX SOFTWARE ENSURE THE CORRECT MARKER CARD AND INLAY ARE USED.

5.1 MANUAL MODE - PC BSTR TERMINAL BLOCK MARKERS


Select the marker from the **Item Families Menu**

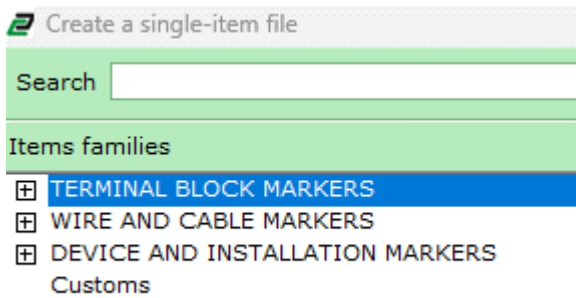

Select the  Under terminal blocks a dropdown list of material type will display. For this example we will select PC (Polycarbonate Material)



Select again the  under **PC**

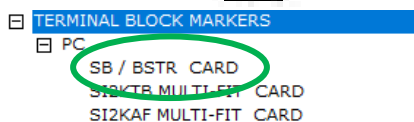

Three options will appear, **Choose SB/ BSTR CARD**. For this example we will select SB/BSTR CARD.



The Virtual Printer/Print Mode is displayed in the description, remember to write this down as it will be important to select the correct virtual printer/Mode once the card is ready for print.

Item code	Description
28346.7	PC - 28346.7 - PC-BSTR 5X10/48 (WH) Printer:MANUAL MODE
28352.7	PC - 28352.7 - PC-BSTR 5X10/48 MI (WH) Printer:MANUAL MODE
28345.7	PC - 28345.7 - PC-BSTR 5X12/48 (WH) Printer:MANUAL MODE
28344.7	PC - 28344.7 - PC-BSTR 6X12/40 (WH) Printer:MANUAL MODE
28350.7	PC - 28350.7 - PC-SB 3,5X5/56 (WH) Printer:MANUAL MODE
28342.7	PC - 28342.7 - PC-SB 5X5/48 (WH) Printer:MANUAL MODE
28343.7	PC-SB 6X5/40 WH - (WH) Printer:MANUAL MODE
28357.7	PC - 28357.7 - PC-SB 7,5X4/32 (WH) Printer:MANUAL MODE

When SB/BSTR CARD is selected, the list of items for these particular material marker types will appear on the **LIST OF ITEMS**.




The list of items list provides the following information:

- 1) Item Code: Order code for the card
- 2) Description: Material of the card, order code, model #, Color, and Print Mode.

(Please remember the print mode, since you it later on in order to select the correct virtual printer for printing).


Double Click on the terminal cards size you wish to print.

When **Item 28346.7** is selected the new screen will appear.

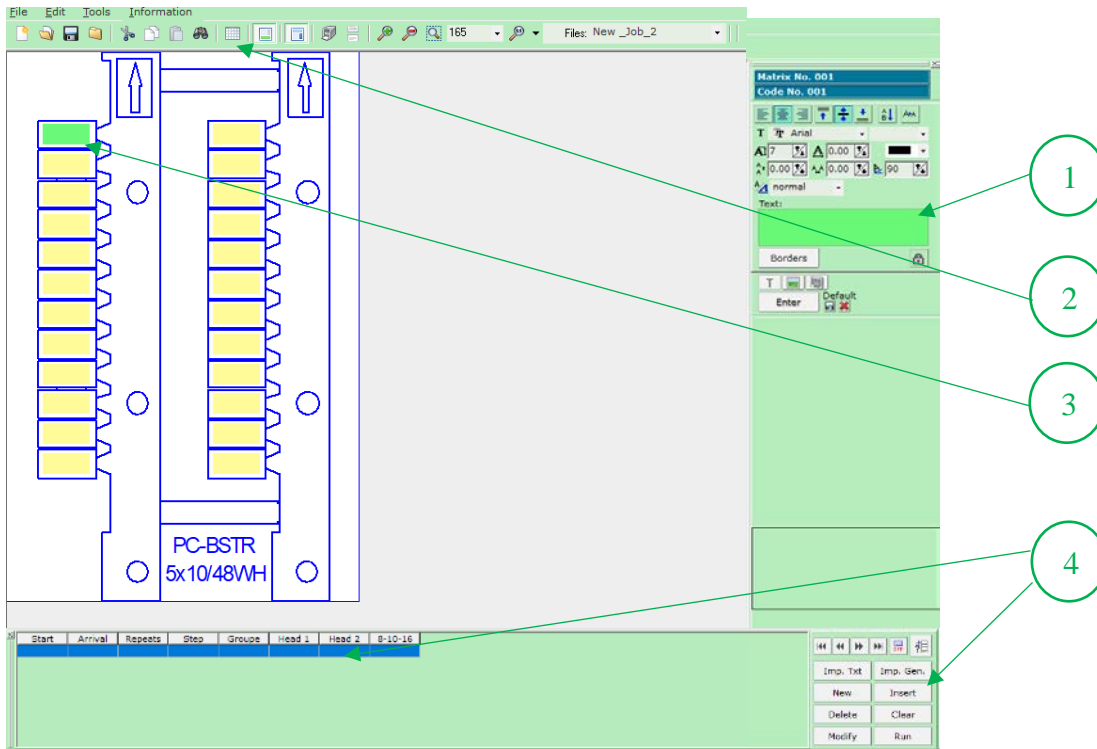

There are 4 ways to input data into the tags for which you wish to print.


- GREEN TEXT BOX:** Enter text directly here for each tag cell. Here you can use all the functions to modify the text font, orientation, centering and font size.
- TEXT GENERATOR:** Select and Click to enter the text Generator window. Here you can do sequential numbering or characters by inputting a start and end value. You can also do repeating of the characters and skipping every other text by inputting the Step number.
- TAG CELL:** Enter text directly into the marker tag cell. It will automatically appear in the Green Text box for additional functions and font adjustments.
- INSERT GENERATOR:** Similar to the Text Generator, select Insert to expand the text generation window. Importing text, clearing and modifying text here can be done as well.

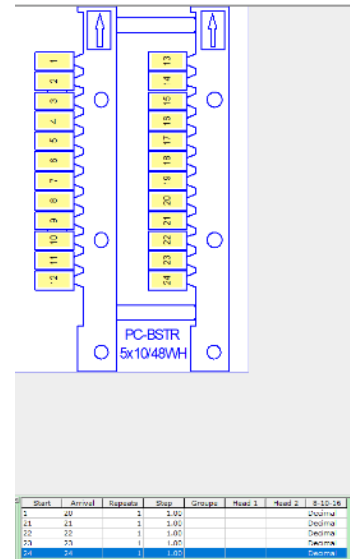


Once one of the above TEXT input methods is selected, any text can be enter as per example below.



Click **File**, then select **Print file**

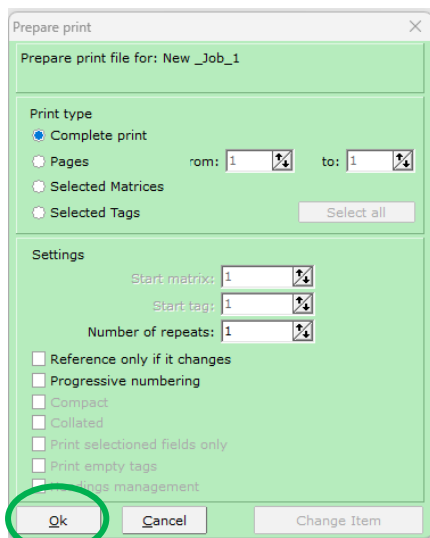

Select the Print type: ex. **Complete print** or **Pages**
 Select additional settings if necessary: ex. **Repeats** etc....
 Click **OK**

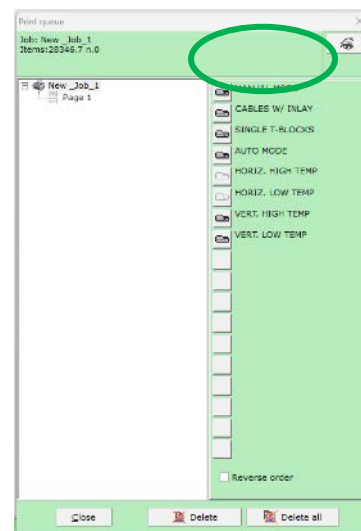

Select **MANUAL MODE**
 Printing will Begin...

5.1.1 PREPARING PRINTER FOR MANUAL MODE – PC BSTR TERMINAL BLOCK MARKERS

Prior to sending print jobs to the printer ensure the following is done to prepare the correct card for printing.

Execute all the described operations with the printer turned off.

Position correctly the Inlay in-feed plates on the TTPCardMAX printer. The Inlay in-feed plates should fit easily in between the printer rail guides.

ACCESSORIES NEEDED TO SETUP MANUAL PRINT MODE

33001.0 - CCI-S TBBSTR001 Inlay for Terminal Tags



Note 1

Note 2

Note 3

Note 4




NOTE:

1. Marker Card Legend: Inlay insert position is critical. If printing PC-SB cards: 3,5x5, 5x5, and 6x5 keep the orientation and Arrow toward the in-feed of the printer. If printing PC-SB 7,5x4 the card must be rotated in order for it to sit properly on the inlay.
2. Hole Positions: The inlay holes allow for the proper mounting of the PC-SB cards 3,5x5, 5x5, 6x5 and 7,5x4. Depending marker Card legend (see note 1), the marker can be positioned as is or rotated. Only here will you need to rotate cards depending if using PC-SB 7,5x4 or not.
3. Hole Position 2: This second set of inlay holes allow for the proper mounting of the PC-SB cards 6x12, 5x12, 5x10. There is no need to rotate any cards in this area.
4. Marker Card Legend 2: Inlay insert position is critical. If printing PC-SB cards: 6x12, 5x12, and 5x10 keep the orientation and Arrow toward the in-feed of the printer.

INSERTING THE INLAY


The CCI-S TBBSTR001 Inlay for Terminal Block tags in-feed, should be inserted in the **TTPCardMAX** printer so that the encoder underneath the inlay can be read and should be on the below left lateral part.



 For Only the PC-SB and PC-BSTR cards you must break them in half prior to placing them on the Inlay




Take the card and Break it in half;

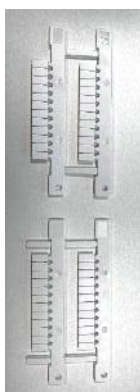

Identify & position PC-BSTR Card size on the inlay



Set half of the card onto the Inlay;

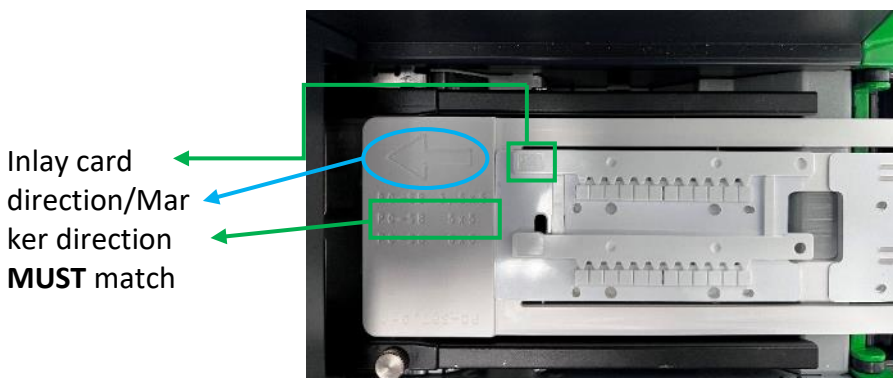

Ensure the card is firmly on the inlay.

5.2 CABLES W/INLAY MODE – SI2K02 CABLE MARKERS


With the INLAY, FEEDER, and MARKER TAGS in the correct arrangement, you can now proceed to the software for the printing of CABLES W/ INLAY mode.

Open **ContaPrintMAX**.

By double clicking on the icon




the ContaPrintMAX software splash screen will startup.

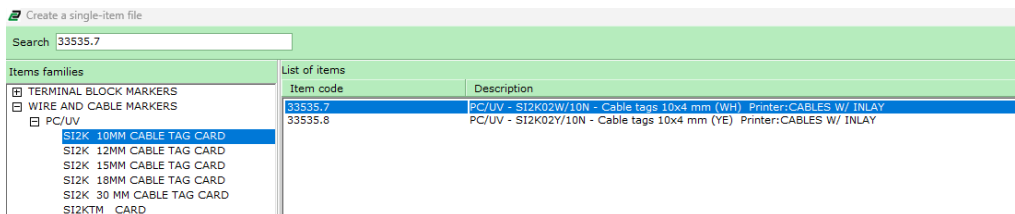

Press **Enter**

Then Select the Item to Print for example; SI2K02W/10N or type in the search bar 33535.7

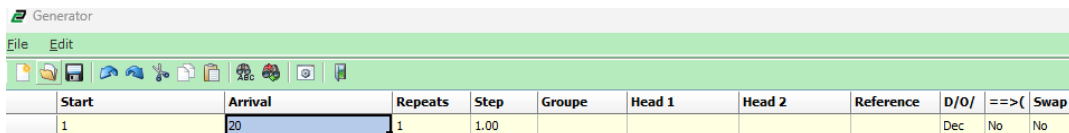

Click on the Generator Window




Insert the data to print.

Click Exit window




when complete .


The marker image window will reappear with the text entered in the generator.

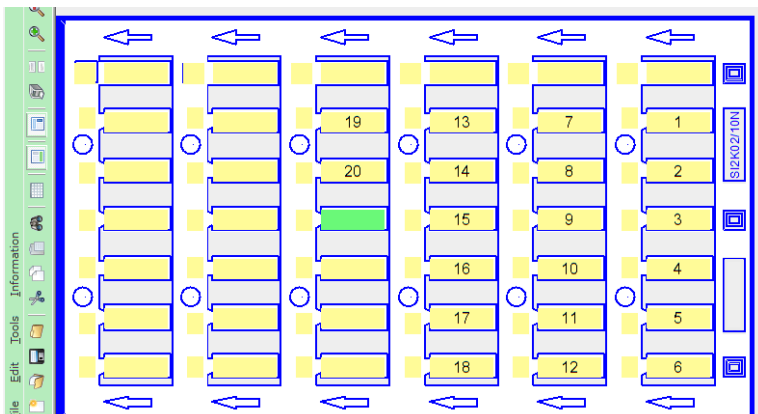

Click on **File** or Printer icon to print  Or If File go to **Print File**

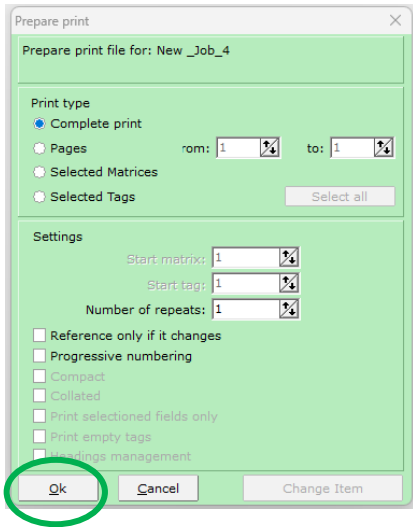

Select the Print type: ex. **Complete print** or **Pages**
Select additional settings if necessary: ex. **Repeats** etc....Click **OK**

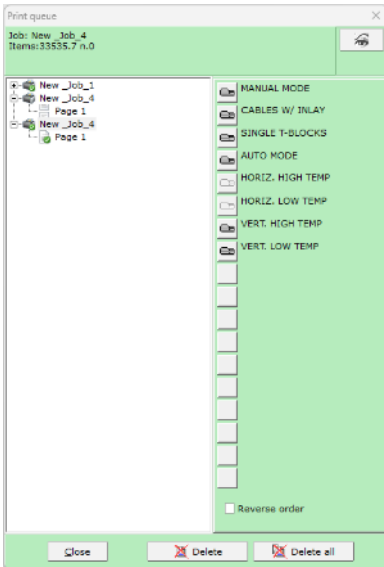

Select **CABLES w/ INLAY** Printing will Begin...

5.2.1 PREPARING PRINTER FOR SI2K02 CABLE MARKERS WITH INLAY

Prior to sending print jobs to the printer ensure the following is done to prepare the correct card for printing.


Execute all the described operations with the printer turned off.

Position correctly the Inlay in-feed plate and Feeder on the TTPCardMAX printer guides following carefully the instructions here as follows.

ACCESSORIES NEEDED TO SETUP CABLES W/INLAY MODE


33626.0 – TTPCardMAX Automatic Feeder

33003.0 - CCI-A SI2K0014NP1 Inlay for Cable Tags

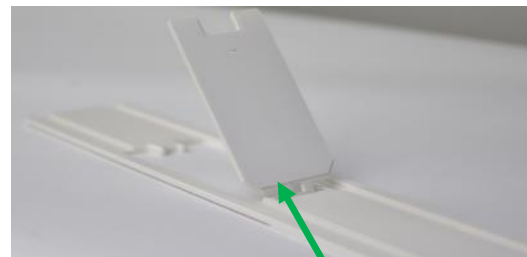

Mobile Inlay for loading the Items

Take the "Automatic Feeder" and mount it on the printer guides until it clicks into place with screw A as shown in the sequence of images.

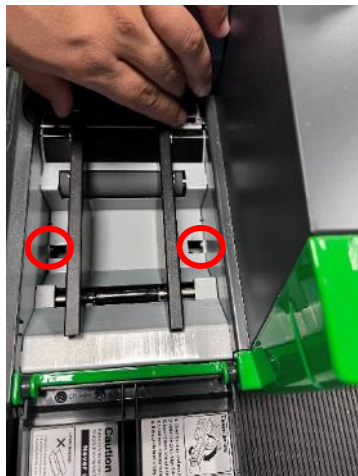

Feeder locking slider aligned to the fastening Screw-A


Step 1: Unscrew the [screw-A](#), to move the docking rails in.

Step 2: Now that the docking rails are loose, move them in to expose mounting holes.

Step 3: Bring the rails back into position and align the slider pin to the fastening [screw-A](#).



Do not tight too much the locking screw A so as to not damage it. Do not loosen too much the docking [screw A](#) but just enough to fix the guides

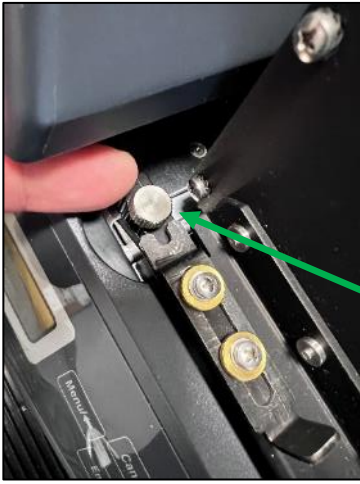

Screw A -
Screw down
to lock
feeder into
place

Step 4: Screw down the feeder




Step 5: Ensure the canister is sitting firm on docking rails.


PREPARING OF THE INLAY

Execute all the described operations with the Printer turned off.

Take the INLAY and pass it through the FEEDER

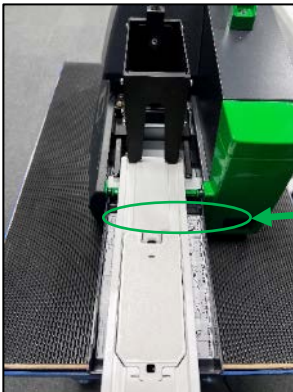

Inlay should freely move back and forth through the docking guides


	<p>WARNING To print in CABLES W/ INLAY MODE, always make sure to utilize the correct INLAY.</p>
---	--

Pick up 2 marker tag modules for cable tags and insert it in the Automatic Feeder.



Fixing Screw B:
This screw
adjusts the gap
between the
inlay the
marker card

Fix the B screw so that the feeder can properly feed one card at a time. Only 1 marker card should pass at a time. If more pass through adjust the screw so that the guillotine moves down.

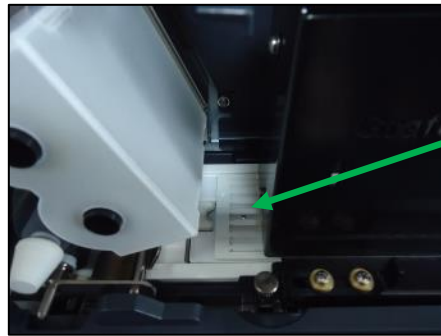

Position of marker card ready for the Print stage.

Insert the marker cards in the card Feeder for a maximum of 64 card modules.

TURN ON THE PRINTER

TURN ON the Printer.


On the display will be visualized the following messages

PLATE PRINTER
Version 4.00

Printing Ready
S-black Plate

Take the “**INLAY**” carefully and insert it beneath the “**FEEDER**” till the mobile part is just under the “**FEEDER**”



 The printer will automatically detects the “**INLAY**” and moves it in the correct **HOME** position **READY** for the Print.

When the “**INLAY**” is in the correct HOME position, if you do not print with the PC in 5 minutes, the printer automatically moves the “**INLAY**” away from the home position.

Be sure that the **ONLINE** light is turned on and that the **TTPCardMAX** is in **ONLINE** mode.

5.3 SINGLE T-BLOCKS MODE – SI2KTB TERMINAL BLOCK MARKERS


With the INLAY, FEEDER, and MARKER TAGS in the correct arrangement, you can now proceed to the software for the print in SINGLE T-BLOCKS mode.


Open **ContaPrintMAX** software.

By double clicking on the icon  the ContaPrintMAX software splash screen will startup.




Then Select the Item to Print for example; SI2KTB3509LY or type in the search bar 33046.8 Press **Enter**

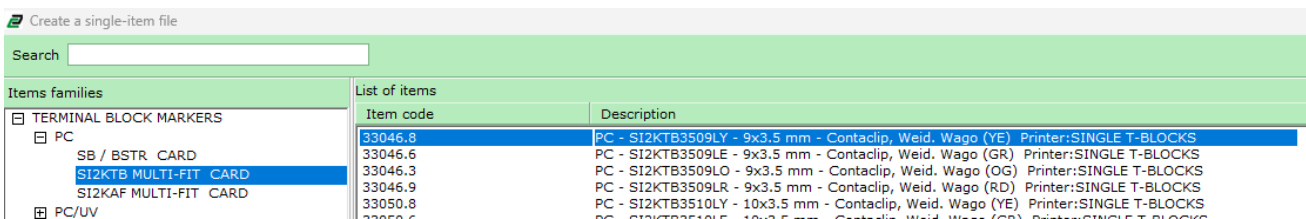


Click on the Generator Window 

Insert the data to print.

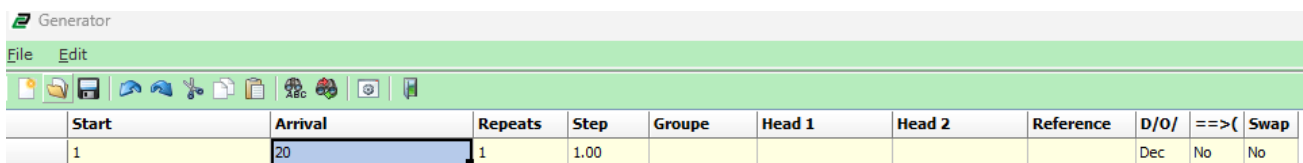


Click Exit window  when complete .


The marker image window will reappear with the text entered in the generator.

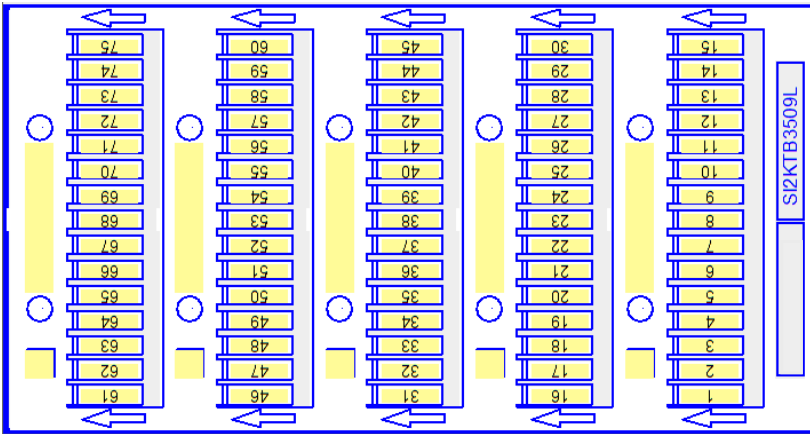

Click on **File** or Printer icon to print  Or If File go to **Print File**

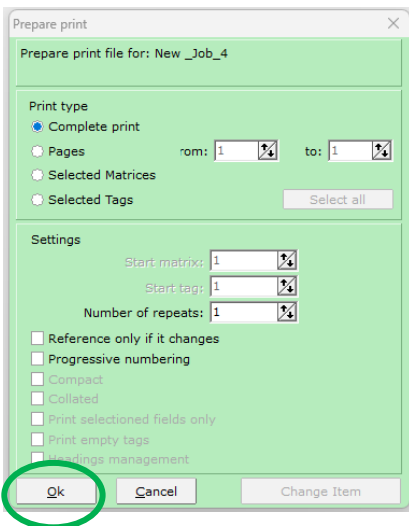

Select the Print type: ex. **Complete print or Pages**
Select additional settings if necessary: ex. **Repeats etc....**
Click **OK**

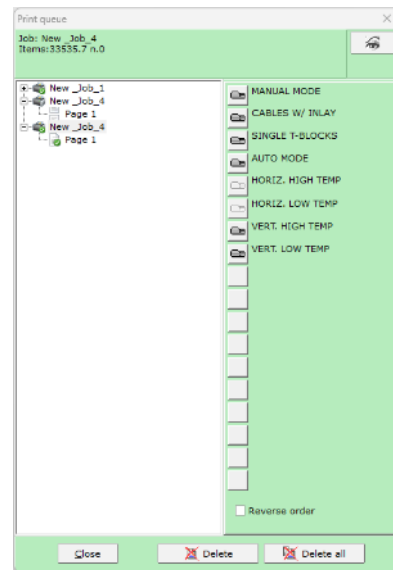

Select **SINGLE T-BLOCKS**
Printing will Begin...

5.3.1 PREPARING PRINTER FOR SI2KTB TERMINAL BLOCK MARKERS


Prior to sending print jobs to the printer ensure the following is done to prepare the correct card for printing.

Execute all the described operations with the printer turned off.

Position correctly the Inlay in-feed plate the TTPCardMAX printer guides following carefully the instructions here as follows.

ACCESSORIES NEEDED TO SETUP SINGLE-T MODE

33018.0 CCI-S SI2K0017 Inlay for single operation SI2KTB Terminal markers

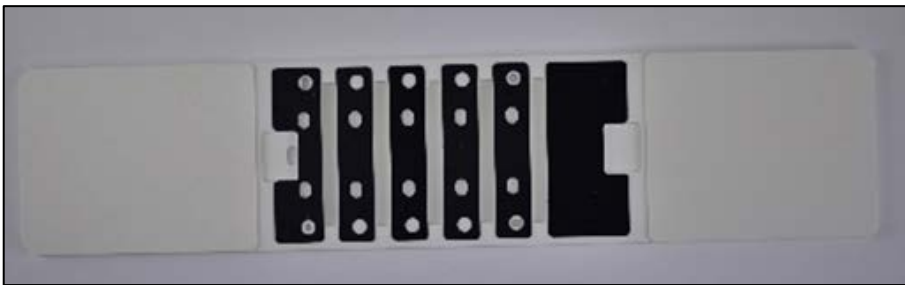

INSERTING THE INLAY

The CCI-S SI2K0017 Inlay for Terminal Block tags in-feed, should be inserted in the **TTPCardMAX** printer so that the encoder underneath the inlay can be read and should be on the below left lateral part.



Take the Module of the Terminal Blocks Tags and position it on the Support Plate for Terminal Blocks in the way that the module's feet can fit in the Inlay for Terminal Blocks holes as in the picture.



Be sure that the Module is well positioned on the Inlay for Terminal Blocks.



TAKE NOTE

The printer will automatically detects the "INLAY" and moves it in the correct **HOME** position **READY** for the Print.

When the "INLAY" is in the correct HOME position, if you do not print with the PC in 5 minutes, the printer automatically moves the "INLAY" away from the home position.

Be sure that the **ONLINE** light is turned on and that the **TTPCardMAX** is in **ONLINE** mode.

5.4 AUTO MODE – SI2KAF/SI2KTM TERMINAL BLOCK/WIRE MARKERS


With the INLAY, FEEDER, and MARKER TAGS in the correct arrangement, you can now proceed to the software for the printing of AUTO MODE mode.

Open **ContaPrintMAX**.


By double clicking on the icon



the ContaPrintMAX software splash screen will startup.

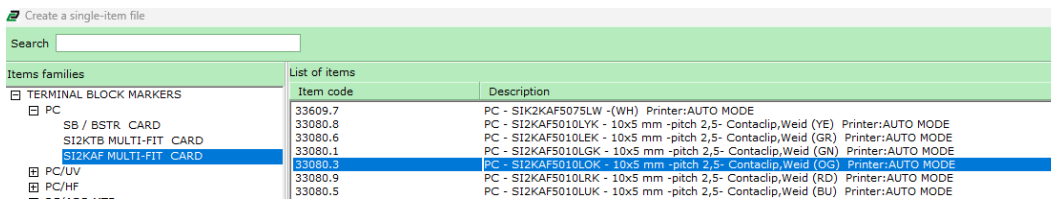

Then Select the Item to Print for example; SI2KAF MULTI-FIT or type in the search bar 33082.7

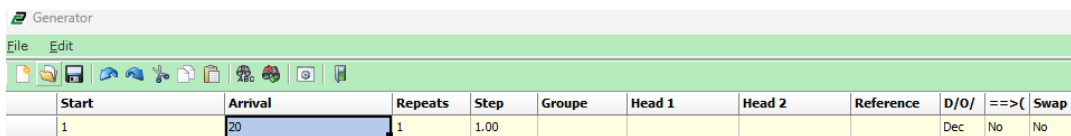

Click on the Generator Window




Insert the data to print.

Click Exit window




when complete .


The marker image window will reappear with the text entered in the generator.

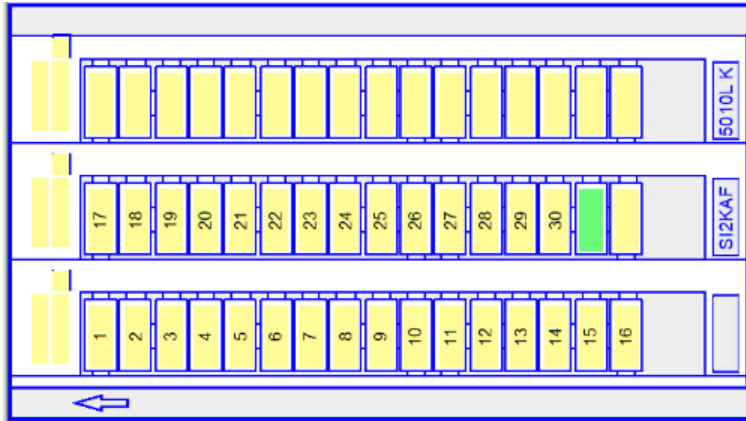

Click on **File** or Printer icon to print  Or If File go to **Print File**

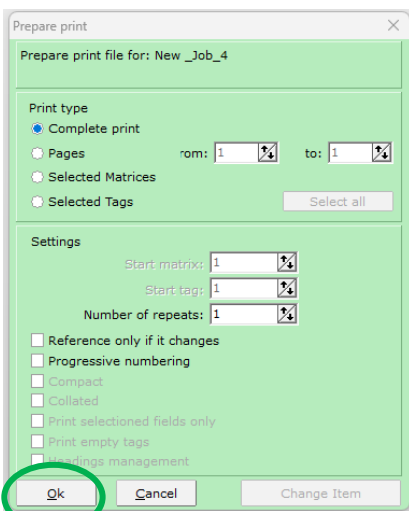

Select the Print type: ex. **Complete print** or **Pages**
Select additional settings if necessary: ex. **Repeats etc....**
Click **OK**

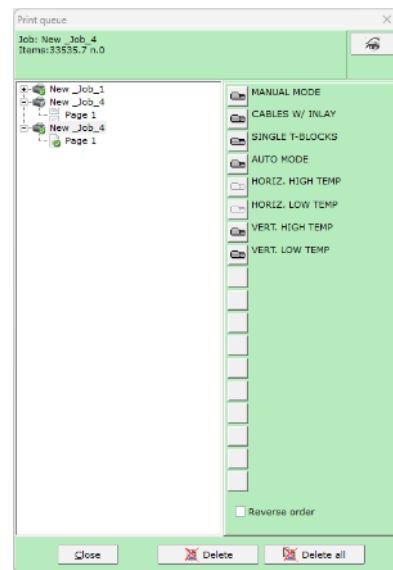

Select **AUTO MODE**
Printing will Begin...

5.4.1 PREPARING PRINTER FOR SI2KAF/SI2KTM TERMINAL BLOCK/WIRE MARKERS

Prior to sending print jobs to the printer ensure the following is done to prepare the correct card for printing.

Execute all the described operations with the printer turned off.

Position correctly the Inlay in-feed plate and Feeder on the TTPCardMAX printer guides following carefully the instructions here as follows.

ACCESSORIES NEEDED TO SETUP AUTO MODE

33626.0 – TTPCardMAX Automatic Feeder

33007.0 - CCI-A SI2K0014NP4 Inlay for Terminal Tags




Mobile Inlay for loading the Items

Take the "Automatic Feeder" and mount it on the printer guides until it clicks into place with screw A as shown in the sequence of images.



Step 1: Unscrew the [screw-A](#), to move the docking rails in.

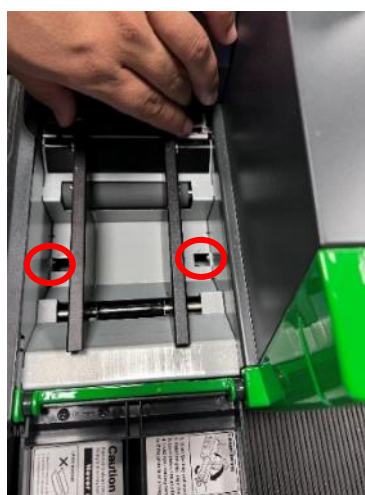

Step 2: Now that the docking rails are loose, move them in to expose mounting holes.



Feeder locking slider aligned to the fastening **Screw-A**

Step 3: Bring the rails back into position and align the slider pin to the fastening **screw-A**.



Do not tight too much the locking screw A so as to not damage it. Do not loosen too much the docking **screw A** but just enough to fix the guides



Screw A - Screw down to lock feeder into place


Step 4: Screw down the feeder



Step 5: Ensure the canister is sitting firm on docking rails.

PREPARING OF THE INLAY

Execute all the described operations with the Printer turned off. Take the **INLAY** and pass it through the **FEEDER**

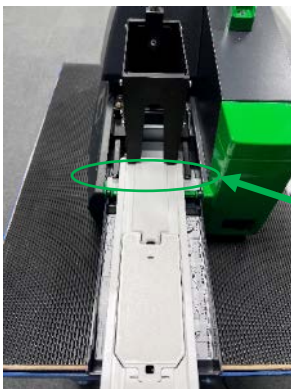


Inlay should freely move back and forth through the docking guides



WARNING


To print in AUTO MODE, always make sure to utilize the correct **INLAY**.

Pick up 2 marker tag modules for cable tags and insert it in the Automatic Feeder.

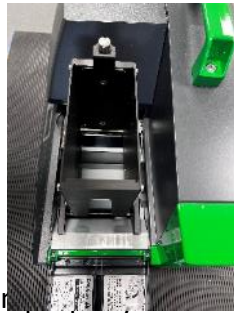

Fixing **Screw B**:
This screw
adjusts the gap
between the
inlay the marker
card

er card e card at a time only 1 marker card should pass at a time. If more pass through adjust the screw so that the guillotine moves down.

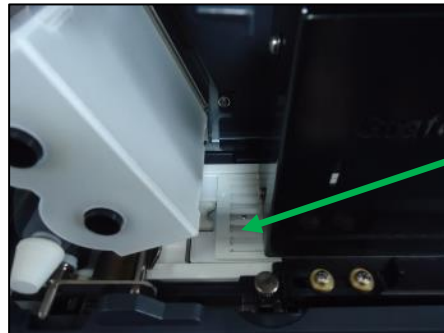

Position of
marker card
ready for the
Print stage.

Insert the marker cards in the card Feeder for a maximum of 64 card modules.

TURN ON THE PRINTER

TURN ON the Printer.

On the display will be visualized the following messages

PLATE PRINTER
Version 4.00

Printing Ready
S-black Plate

Take the "INLAY" carefully and insert it beneath the "FEEDER" till the mobile part is just under the "FEEDER"



The printer will automatically detects the "INLAY" and moves it in the correct **HOME** position **READY** for the Print.

When the “INLAY” is in the correct HOME position, if you do not print with the PC in 5 minutes, the printer automatically moves the “INLAY” away from the home position.

Be sure that the **ONLINE** light is turned on and that the **TTPCardMAX** is in **ONLINE** mode.

5.5 HORIZ. HIGH TEMP MODE – SI2K/EVO/PMMA/PUR DEVICE/INSTALLATION MARKERS


With the INLAY, FEEDER, and MARKER TAGS in the correct arrangement, you can now proceed to the software for the printing of **HORIZ. HIGH TEMP MODE** mode.

Open **ContaPrintMAX**.

By double clicking on the icon




the ContaPrintMAX software splash screen will startup.

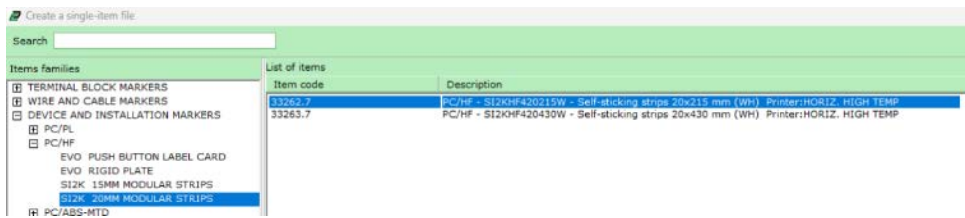

Press **Enter**

Then Select the Item to Print for example; SI2KHF420215W or type in the search bar 33262.7

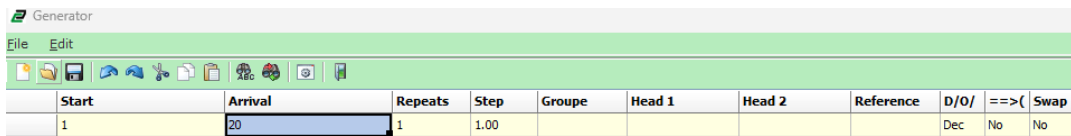

Click on the Generator Window




Insert the data to print.

Click Exit window




The marker image window will reappear with the text entered in the generator.

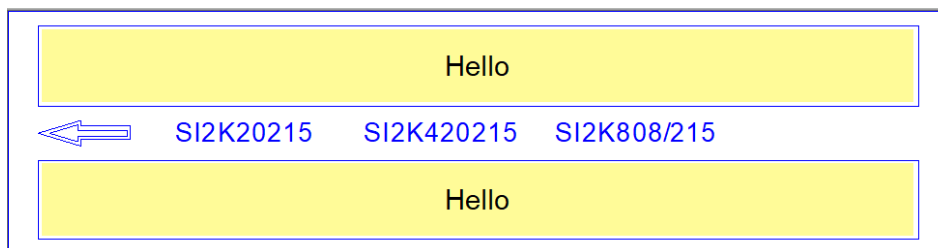


Click on **File** or Printer icon to print



Or If File go to **Print File**

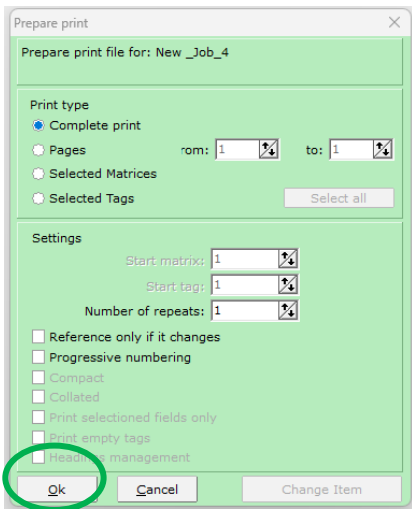

Select the Print type: ex. **Complete print** or **Pages**
Select additional settings if necessary: ex. **Repeats** etc....
Click **OK**

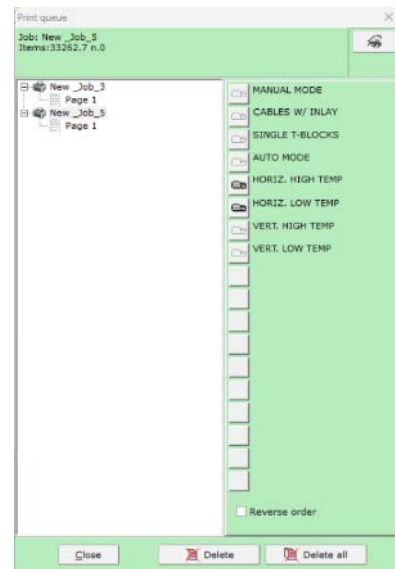

Select **HORIZ. HIGH TEMP**
Printing will Begin...

5.5.1 PREPARING PRINTER FOR SI2K03/EVO/PMMA/PUR DEVICE/INSTALLATION MARKERS

Not all of our offering requires an Inlay or an accessory. Self-feed-in cards are available by Conta-Clip, which can easily allow the user to insert them into the printer on their own. The quick manual process allows for flexibility and low cost, which will be described here.

All that is required is to correctly position the items to be printed on the printer following carefully the instructions as they here follow.

INSERTING SELF PRINTED MODULES ON THE PRINTER



Detach the **Guide Screw**



Adjust the width guides to the plate sides.



TAKE NOTE

- Printing on a plate that has burrs on its edges can cause printing problems and can damage the print head. Also, metallic particles adhering to a plate can damage the print head, so handle and store plates carefully. Damage to the print head caused by printing on dirty plates is not covered under the warranty.
- Printing on plates that have dirt or grease (including skin oils) on the surface will result in poor print quality
- When aligning the width guides with the width of the plate, align the leading edge of the plate with the cleaner brush. If you push the leading edge of the plate into the feed opening, the printer Automatically takes up the plate and positions it for printing.



Insert the Module on the printer Plate



Set the Guides to the width of the Module



- If the width guides are too close together, the plate will not be feed properly. It is important to adjust the width guides so that the plate is not loose but it moves smoothly to the left. If the width guides are too loose, the plate will be fed not straight, yielding poor print results.
- Always make sure the guides are properly aligned with the plate.



Tighten the locking screw securing the width guides in the right position.



Insert the plate into the feed opening until the printer beeps.

When printing more than one plate, before loading another plate, wait until the printer ejects the previous plate and beeps and until the message PRINTING disappears from the display. At this stage you can load the next plate

TURN ON THE PRINTER

On the display will be visualized the message `PLATE PRINTER` and afterwards the message `Version 4.00`

`PLATE PRINTER`
`Version 4.00`

`Printing S-black` `Ready Plate`

The printer detects the Tag or Strip (if it is already on the plane of the printer) and moves it in the correct HOME position READY FOR PRINT.

5.6 HORIZ. LOW TEMP MODE – SI2K/EVO DEVICE/INSTALLATION MARKERS

With the INLAY, FEEDER, and MARKER TAGS in the correct arrangement, you can now proceed to the software for the printing of HORIZ. LOW TEMP MODE mode.

Open **ContaPrintMAX**.

By double clicking on the icon



the ContaPrintMAX software splash screen will startup.

Create a single-item file

Search

Items families	List of items
	Item code Description
[-] TERMINAL BLOCK MARKERS	33382.7 VYL - EVOFX0407W - Self-sticking labels 7x4 mm (WH) Printer:HORIZ. LOW TEMP
[-] WIRE AND CABLE MARKERS	33383.7 VYL - EVOFX0710W - Self-sticking labels 10x7 mm (WH) Printer:HORIZ. LOW TEMP
[-] DEVICE AND INSTALLATION MARKERS	33383.8 VYL - EVOFX0710Y - Self-sticking labels 10x7 mm (YE) Printer:HORIZ. LOW TEMP
[-] PC/PL	33383.6 VYL - EVOFX0710M - Self-sticking labels 10x7 mm (GR) Printer:HORIZ. LOW TEMP
[-] PC/HF	33384.8 VYL - EVOFX0412Y - Self-sticking labels 10x7 mm (YE) Printer:HORIZ. LOW TEMP
[-] PC/ABS-MTD	33385.7 VYL - EVOFX0512W - Self-sticking labels 12x5 mm (WH) Printer:HORIZ. LOW TEMP
[-] PC/UV	33385.8 VYL - EVOFX0512Y - Self-sticking labels 12x5 mm (YE) Printer:HORIZ. LOW TEMP
[-] PVC	33385.6 VYL - EVOFX0512M - Self-sticking labels 12x5 mm (GR) Printer:HORIZ. LOW TEMP
[-] PVC/PL	33386.7 VYL - EVOFX0812W - Self-sticking labels 12x8 mm (WH) Printer:HORIZ. LOW TEMP
[-] PET	33386.8 VYL - EVOFX0812Y - Self-sticking labels 12x8 mm (YE) Printer:HORIZ. LOW TEMP
[-] PMMA/HF	33386.6 VYL - EVOFX0812M - Self-sticking labels 12x8 mm (GR) Printer:HORIZ. LOW TEMP
[-] VYL	33387.7 VYL - EVOFX0912W - Self-sticking labels 12x9 mm (WH) Printer:HORIZ. LOW TEMP
EVOFX CONTACTOR LABEL CARD	33387.8 VYL - EVOFX0912Y - Self-sticking labels 12x9 mm (YE) Printer:HORIZ. LOW TEMP
EVOCTR NAME PLATE LABEL CARD	33387.6 VYL - EVOFX0912M - Self-sticking labels 12x9 mm (GR) Printer:HORIZ. LOW TEMP
[-] PUR/HF/SF	33388.7 VYL - EVOFX0615W - Self-sticking labels 15x6 mm (WH) Printer:HORIZ. LOW TEMP
[-] Customs	33388.8 VYL - EVOFX0615Y - Self-sticking labels 15x6 mm (YE) Printer:HORIZ. LOW TEMP
	33388.6 VYL - EVOFX0615M - Self-sticking labels 15x6 mm (GR) Printer:HORIZ. LOW TEMP
	33389.7 VYL - EVOFX0715W - Self-sticking labels 10x7 mm (WH) Printer:HORIZ. LOW TEMP

Press **Enter**

Then Select the Item to Print for example; EVOFX0407W or type in the search bar 33382.7

Generator

File Edit

	Start	Arrival	Repeats	Step	Groupe	Head 1	Head 2	Reference	D/O/	==>(Swap
1		20	1	1.00					Dec	No	No

Click on the Generator Window




Insert the data to print.

Click Exit window




when complete .


The marker image window will reappear with the text entered in the generator.

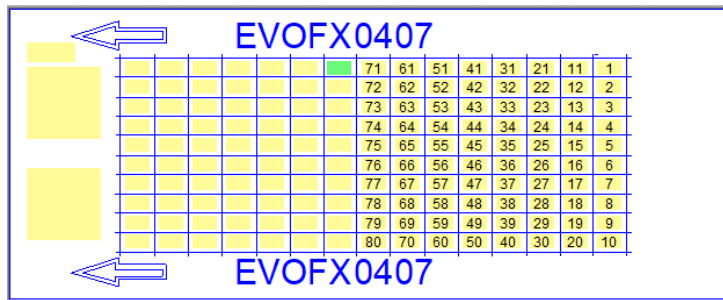

Click on **File** or Printer icon to print  Or If File go to **Print File**

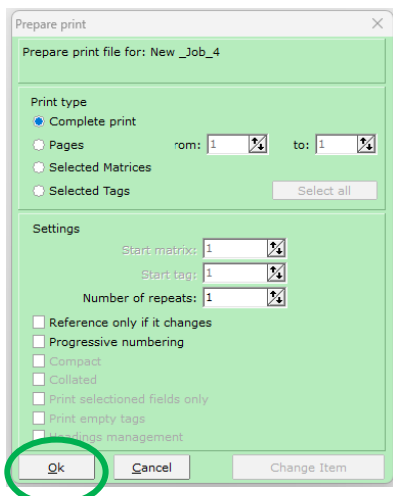

Select the Print type: ex. **Complete print** or **Pages**
 Select additional settings if necessary: ex. **Repeats** etc....Click **OK**

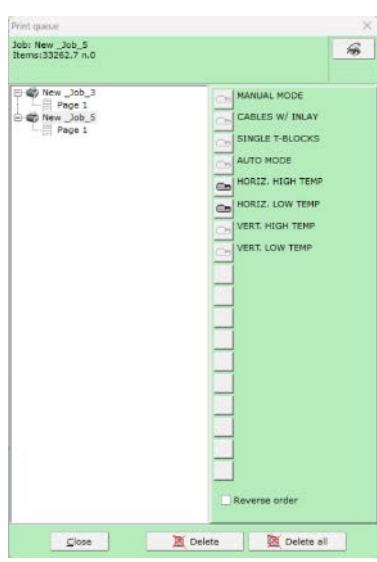

Select **HORIZ. LOW TEMP**, Printing will Begin...

5.6.1 PREPARING PRINTER FOR SI2K/EVO DEVICE/INSTALLATION MARKERS

To Prepare the printer for markers that do not require an Inlay please see 5.5.1 and use the self-feed in method to prepare the printer for printing.

To prepare the printer for markers that require both an Inlay, Automatic Feeder please see 5.4.1 and use the auto mode method to prepare the printer for printing.

The above two cases would be the only cases required for printing in Horizontal low temp mode.

5.7 VERT. HIGH TEMP MODE – SI2KTB/AF/TM/EVO TERMINAL BLOCK & DEVICE/INSTALLATION MARKERS


With the INLAY, FEEDER, and MARKER TAGS in the correct arrangement, you can now proceed to the software for the printing of **VERT. HIGH TEMP MODE** mode.

Open **ContaPrintMAX**.

By double clicking on the icon




the ContaPrintMAX software splash screen will startup.

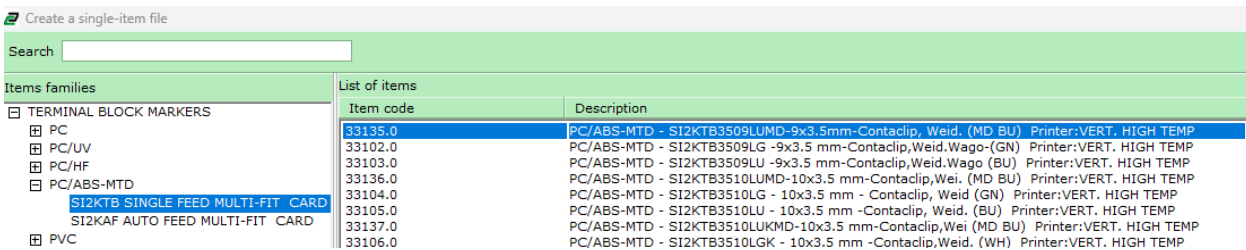

Press **Enter**

Then Select the Item to Print for example; SI2KTB3509LUMD or type in the search bar 33135.0

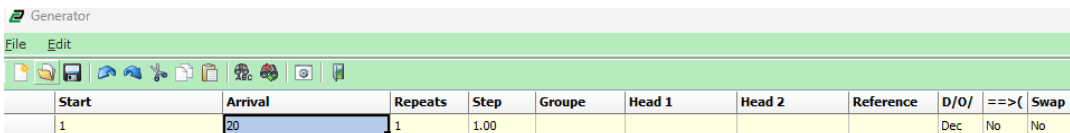


Click on the Generator Window




Insert the data to print.

Click Exit window  when complete .


The marker image window will reappear with the text entered in the generator.

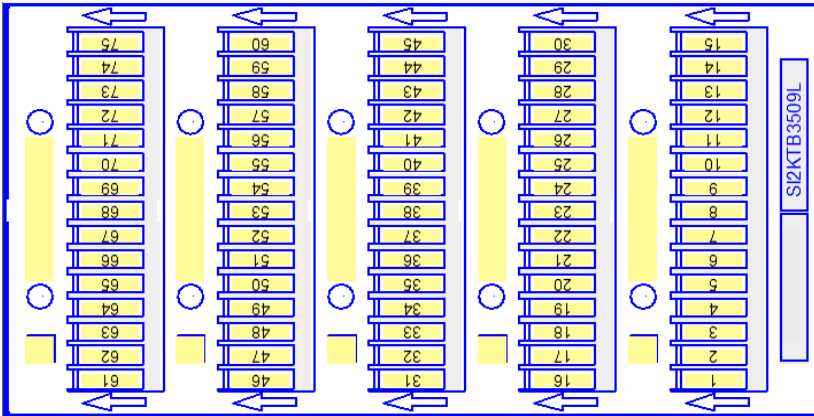

Click on **File** or Printer icon to print  Or If File go to **Print File**

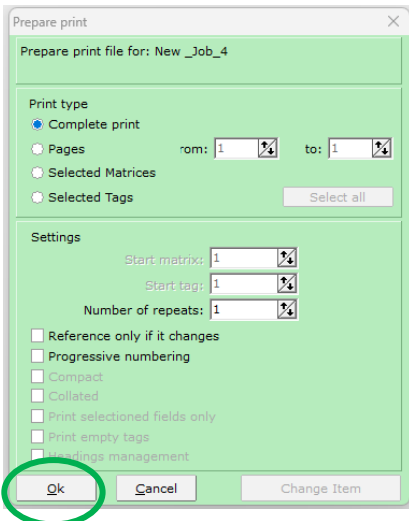

Select the Print type: ex. **Complete print or Pages**
 Select additional settings if necessary: ex. **Repeats etc....**
 Click **OK**

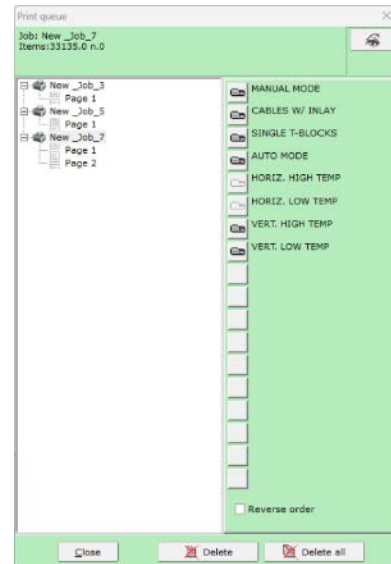

Select **VERT. HIGH TEMP**
 Printing will Begin...

5.7.1 PREPARING PRINTER FOR SI2KTB/AF/TM/EVO TERMINAL BLOCK & DEVICE/INSTALLATION MARKERS

To Prepare the printer for markers that do not require an Inlay please see 5.5.1 and use the self-feed in method to prepare the printer for printing.

To prepare the printer for markers that require both an Inlay, Automatic Feeder please see 5.4.1 and use the auto mode method to prepare the printer for printing.

The above two cases would be the only cases required for printing in Vertical high temp mode.

5.8 VERT. LOW TEMP MODE – EVO/EVOCT/EVOPS CABLE & DEVICE/INSTALLATION MARKERS


With the INLAY, FEEDER, and MARKER TAGS in the correct arrangement, you can now proceed to the software for the printing of **VERT. LOW TEMP MODE** mode.

Open **ContaPrintMAX**.

By double clicking on the icon




the ContaPrintMAX software splash screen will startup.

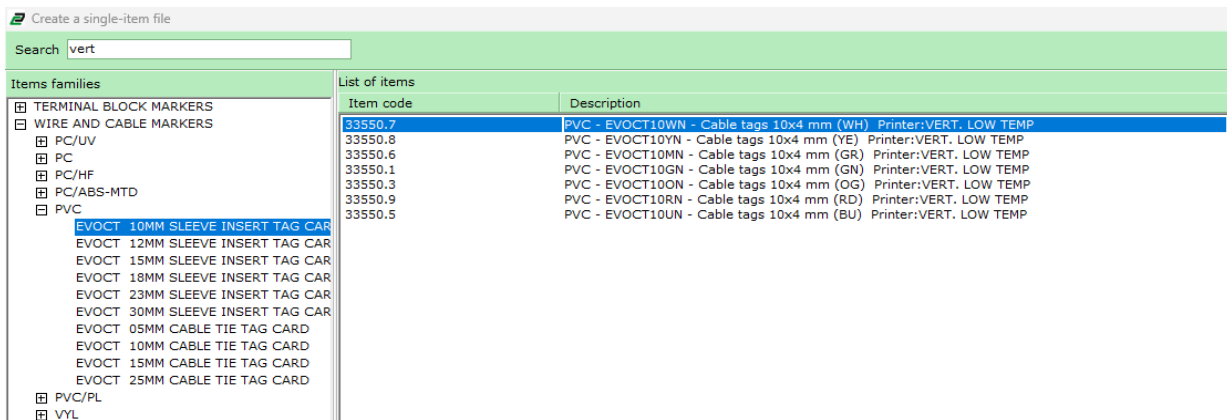

Press **Enter**

Then Select the Item to Print for example; EVOCT10WN or type in the search bar 33550.7

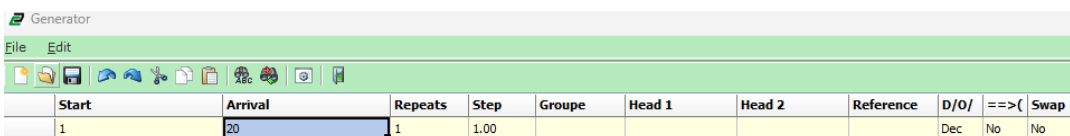

Click on the Generator Window




Insert the data to print.

Click Exit window



when complete .


The marker image window will reappear with the text entered in the generator.

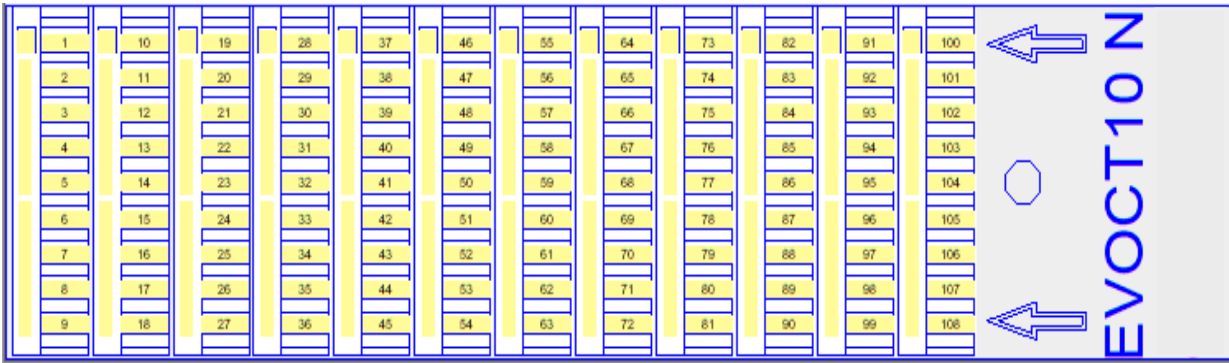

Click on **File** or Printer icon to print




Or If File go to **Print File**

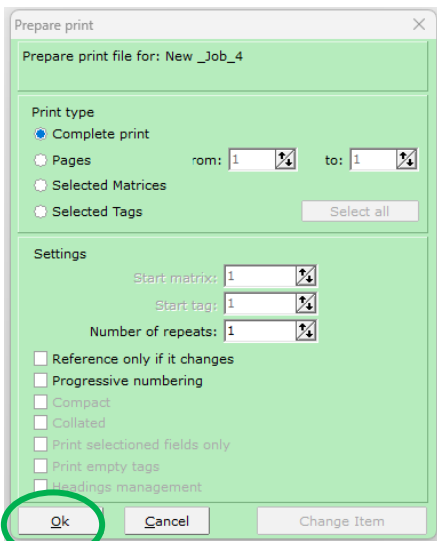

Select the Print type: ex. **Complete print** or **Pages**

Select additional settings if necessary: ex. **Repeats** etc....Click **OK**

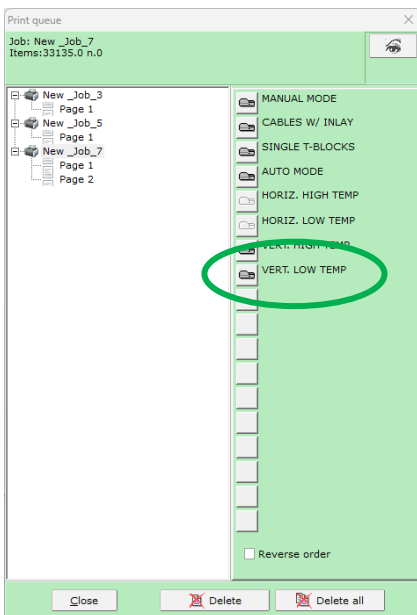

Select **VERT. LOW TEMP**, Printing will Begin...

5.8.1 PREPARING PRINTER FOR EVO/EVOCT/EVOPS CABLE & DEVICE/INSTALLATION MARKERS

To Prepare the printer for markers that do not require an Inlay please see 5.5.1 and use the self-feed in method to prepare the printer for printing.

To prepare the printer for markers that require both an Inlay, Automatic Feeder please see 5.4.1 and use the auto mode method to prepare the printer for printing.

The above two cases would be the only cases required for printing in Vertical Low temp mode

6 - MAINTENANCE

Knowing the printer error messages, troubleshooting and correct use are amongst the top important aspects and are considered in this section.

6.2 - PRINTER ERROR MESSAGES

Here is a summary of possible error message that can be found via the TTPCardMAX printer control panel;

Event	Possible cause	What to do
The Cover is Open Error 02	Printer's frontal cover not correctly closed	Open the cover and close it carefully, until the end
No Ribbon	Ribbon cartridge empty or not positioned correctly	Check the ribbon cartridge, if empty substitute, if cut repair
Set Ribbon	Ribbon cartridge not correctly positioned	Open the cover, remove and insert again the cartridge, until it is not correctly positioned
No Clening tape	Cleaning tape not present or empty	Check the cleaning cassette, if needed substitute
Set a new media	No Media in the printer	Insert a new media
Remove media and set it again	Media not correctly feeded into the printer	Remove the media, when you read "set a new media", insert it again until you hear the "bip"
Media feed Error	Media jam in printer	Remove all the media, press Cancel, when displayed "set a new media", insert media again until you hear the "bip"
Check feeder Type	Wrong support plate	Substitute the support plate with the right one for the media you are printing.
Check Media and Press enter	No media on the support plate / feeder empty	Fill the right media in the feeder, then press Enter

6.3 - PRINTER TROUBLESHOOTING

Event	Possible cause	What to do
Printer does not react	Printer is not On Line	Check Power supply is On Check On-Line Led is On
Printer is turned on but does not react	PC connection faulty	Check the PC <--> printer connection
Printer is turned on but does not react	PC – Printer communication faulty	Reload printer profile

6.3.1 – CORRECT USE

Event	What to do
<p>JAMMED PLATE Removing the item with strength or not using the “REMOVE” function may cause damage with no solution ultimately for the Print head.</p>	Utilize only the “MENU – REMOVE” function to eject the item from the printer. Press “ONLINE” and then “MENU” With the right arrow select “REMOVE” and press the right or left arrow to eject the item
<p>ABORT A PRINT When turning printer ON and the message is “Now receiving” from a preceding print</p>	To abort a print and cancel print data, press Cancel at least for three seconds straight before the printer has started to print.

6.3.2 – PRINT QUALITY

Event	Possible cause	What to do
Media printed correctly, but not aligned	Guides not correctly positioned to guide the media	Check the guides, if necessary set the guides closer to the side of the media/support plate
Media printed very faint	Non correct driver's setting	Reload the printer profile
Media printed very smudged	Non correct driver's setting	Reload the printer profile
Media printed with some punctual defects	Surface of the media is dirty	Check that the surface of the media is not dirty, if necessary clean with alcohol
Media printed with punctual defects	Cleaning roller dirty	Run the cleaning function (Online->Menu-->Cleaning)

7 - INFORMATION TO USERS ON RECYCLING OPERATIONS

7.1 PACKAGING

The packaging materials for this printer are recyclable and can be reused.

Therefore, it is appropriate to dispose all materials according to national provisions relating to waste disposal and in compliance with current local operational. (municipal, etc.).

The materials of this printer can be recycled and reused if disassembled by a specialized firm.

Do not discard or throw in the fire electrical and electronic components.

The electric and electronic components must be disposed of according to national rules on waste electrical and electronic equipment and in compliance with any local operational forecasts.

7.2 DISPOSAL



Legislative Decree of March 14, 2014 n. 49: "Implementation of Directive 2012/19 / EU Waste Electrical and Electronic Equipment (WEEE)".

The crossed-out wheeled bin symbol on the product or its packaging, indicates that the product at the end of its life must be collected separately from other waste.

This appliance must be disposed of by returning it to the retailer upon purchasing a new replacement "returnable" or disposed of by an authorised designated collection point for the recycling of waste electrical and electronic equipment.

For further information on waste collection and recycling centres, please refer to the RoHs Directive and contact your local authorities.

Incorrect disposal of this type of waste product can damage the environment and cause problems to health due to the hazardous substances produced by electrical and electronic equipment.

The separate collection and recycling of waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

GENERAL INFORMATION

- ✓ The equipment has to be kept in a proper environment, far from heat sources, possible in indoor or not subject to weather.
- ✓ Tape ribbon or cleaning cassette cannot be disposed of as ordinary waste but must be properly reclaimed through recycling of the same.